

P54.21-2479-09

Shown on model 164.1 up to model year 2010

Located in trunk, spare tire area.

- 1 Cover
- 2 Electrical connectors

Shown on model 164.1 as of model year 2010

Located under the right rear seat.

- N10/8 Rear SAM control unit

- 3 Electrical connector
- N10/8 Rear SAM control unit


 
 
 


P54.21-3044-11

Modification notes

13.10.09	The installation location of the rear SAM control unit (N10/8) has changed	As of model year 2010	
----------	--	-----------------------	--

	Remove/install		
⊗ ⊗			
ⓘ	Information on preventing damage to electronic components due to electrostatic discharge	All models	AH54.00-P-0001-01A
1	Connect STAR DIAGNOSIS and temporarily store basic data from rear SAM control unit (N10/8) in STAR DIAGNOSIS	<ul style="list-style-type: none"> ⓘ Only when installing a new rear SAM control unit (N10/8). ⓘ Installation: Transfer the temporarily stored basic data to the new rear SAM control unit (N10/8). 	

 AD	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
2.1	Remove cover (1) from load compartment side trim	 Only on vehicles up to model 2010.	
2.2	Fold down rear seat on the passenger-side	 Only on vehicles as of to model 2010.	
3	Separate electrical connectors (2)		
4	Unclip rear SAM control unit(N10/8) upwards out of the retaining clamps and remove	 Installation: Pay attention to line routing.	
5	Disconnect electrical connector (3)		
6	Remove rear SAM control unitN10/8		
7	Install in the reverse order		