





MODEL 164, 166, 292

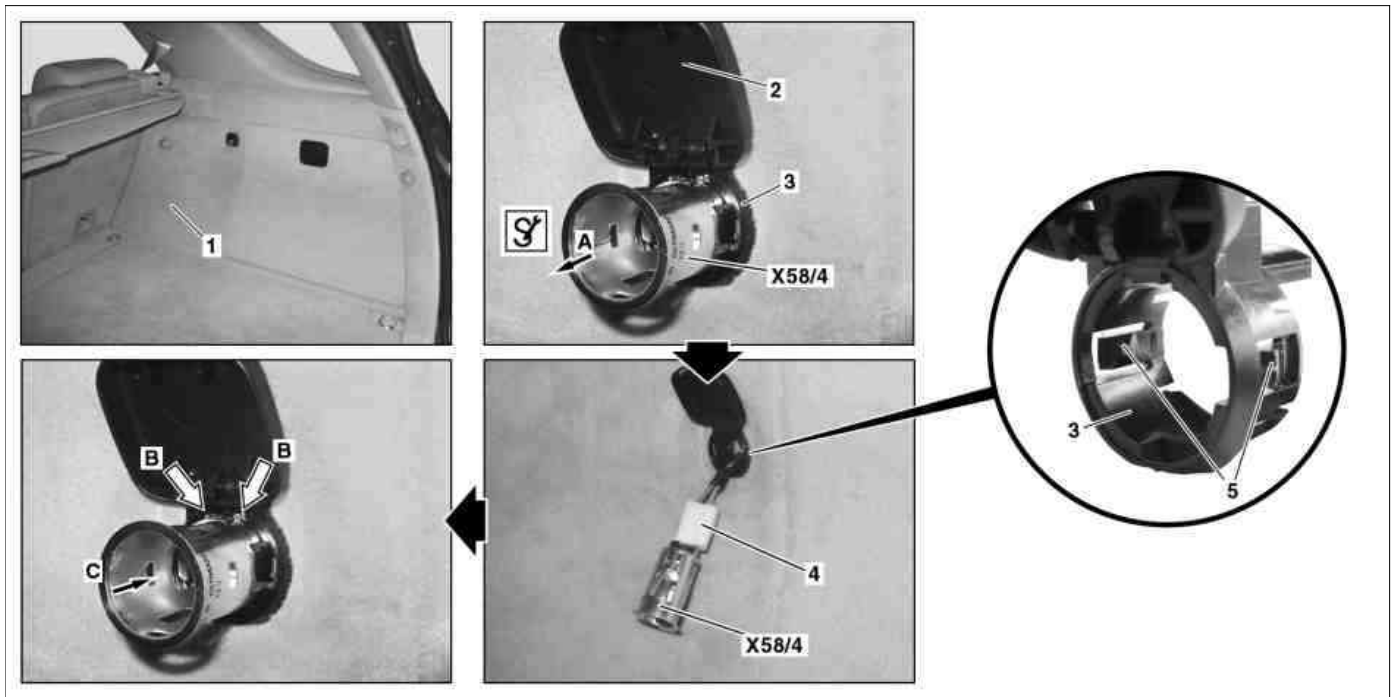


P54.10-2501-09

Shown on model 164.1

1	Trim	4	Electrical connector
2	Housing cover	5	Catch tabs
3	Housing	X58/4	Load compartment socket

 	Remove/install		
1	Switch off ignition and keep transmitter key at a location beyond transmitter range (at least 2 m)		
2	Open liftgate	<p>i MODEL 164.1, 166.0 The load compartment socket (X58/4) is located in the trim (1) at the right side of the load compartment.</p> <p>i MODEL 164.8, 166.8, 292 The load compartment socket (X58/4) is located in the trim (1) at the left side of the load compartment.</p>	
3	Fold up housing lid (2)		
4	Use pliers to release load compartment socket (X58/4) from housing (3) and to pull it out (arrow A)	<p>i Do not turn the load compartment socket (X58/4) when pulling out.</p> <p>i Installation: Make sure that both guides (arrows B) are fed into the housing grooves (3). Slide the load compartment socket (X58/4) into the housing (3) until it engages (arrow C).</p> <p> Pliers</p>	*169589003700
5	Disconnect electrical connection (4)		
6	Release housing (3) at both catch tabs (5) and pull out of panel (1) at side in load compartment		
8	Install in the reverse order		

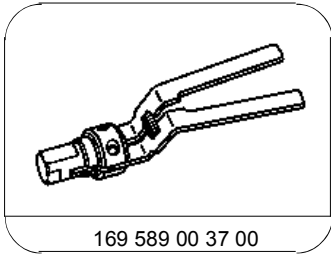

169 589 00 37 00

Pliers