


Shown on model 164.1, front seat removed for better illustration

- 1 Cover
- 2 Bolt
- 3 Upper B-pillar paneling
- 4 Lower B-pillar paneling

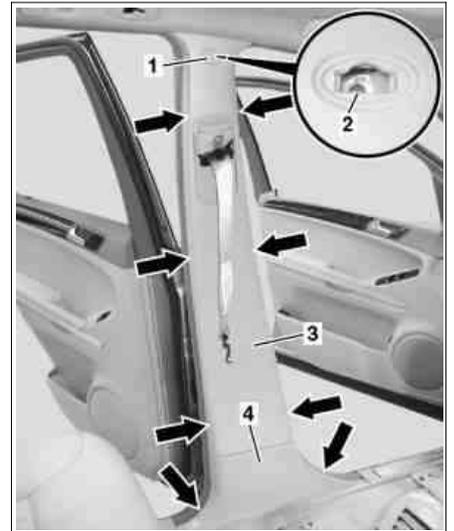


P68.30-3018-02

 	Remove/install		
1	Remove door sill molding		AR68.30-P-4100GZ
2	Loosen seat belt on front seat at bottom		*BA91.40-P-1008-01H
3	Unclip cover (1)	 Long wedge	*115589035900
4	Remove screw (2)		
5	Unclip B-pillar paneling (3) at top.	 In marked areas (arrows).  Mounting wedge	*110589035900
6	Thread seat belt and remove upper B-pillar paneling (3).		
7	Unclip lower B-pillar paneling (4).	 In marked areas (arrows).  Long wedge	*115589035900
8	Install in the reverse order		


 Seat belts/emergency tensioning retractors

Number	Designation	Models
		164.1/8
BA91.40-P-1008-01H	Bolt, seat belt fitting to front seat	Nm 35

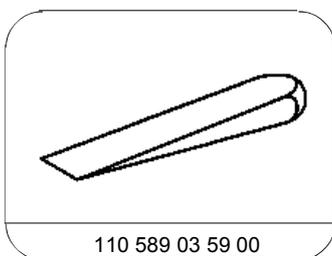

110 589 03 59 00

Mounting wedge

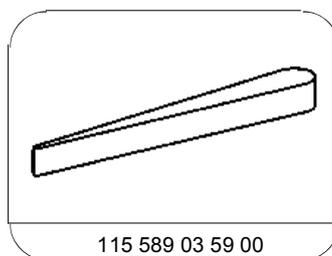

115 589 03 59 00

Long wedge