


AR68.10-P-1520GZ	Remove/install cover below instrument panel (right)	18.11.05
------------------	---	----------


MODEL 164

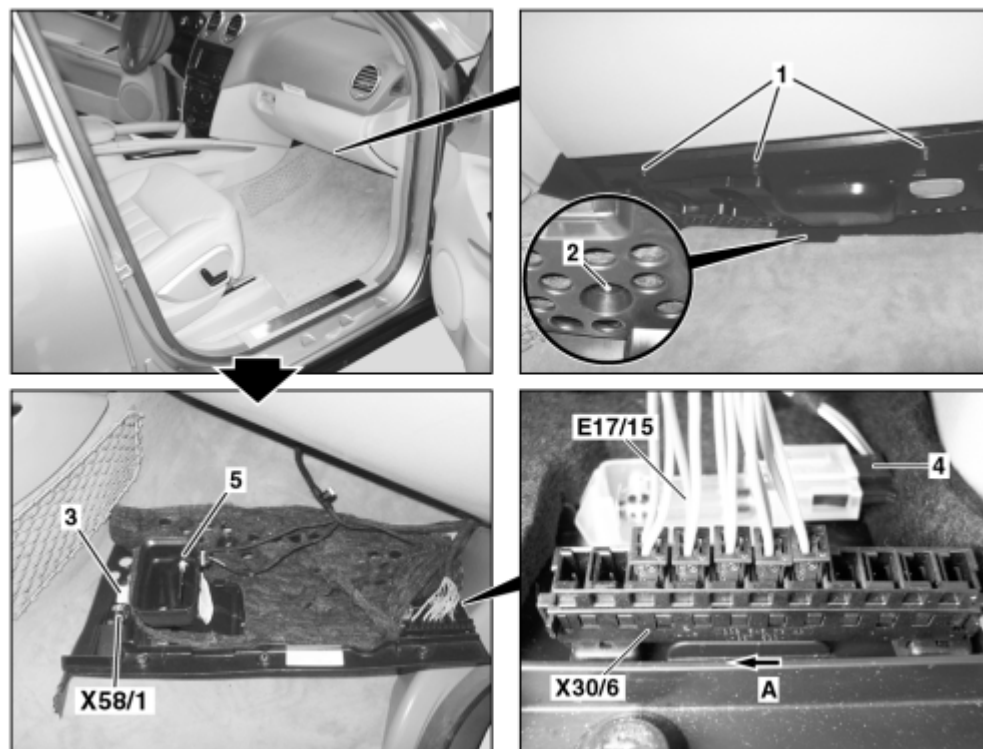



- 1 Bolts
- 2 Bolt
- 3 Electrical connector
- 4 Electrical connector
- 5 Air ducting

- E17/15 Right front footwell lamp
- X30/6 Cockpit voltage distributor (CAN) connector
- X58/1 Interior socket



P68.10-3303-06

	<p>Remove</p>		
<p>1</p>	<p>Switch off ignition and remove transmitter key from EIS [EZS] control unit</p>	<p>i On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).</p>	

2	Unscrew bolts (1) and bolt (2)		
3	Lower paneling		
4	Disconnect electrical connector (3) from interior socket (X58/1)		
5	Disconnect electrical connectors from cockpit voltage distributor (CAN) connector (X30/6)	 Number of CAN connectors varies according to vehicle equipment.	
6	Disconnect electrical connector (4) from right front footwell lamp (E17/15)		
7	Remove air ducting (5) from mount.	 Lay air ducting (5) down in footwell. Do not disconnect electrical connector.	
8	Remove paneling		
	Install		
9	Install air ducting (5) on paneling		
10	Connect electrical connector (3) to interior socket (X58/1)		
11	Connect electrical connectors to cockpit electrical distributor connector (CAN) (X30/6)		
12	Connect electrical connector (4) to right front footwell lamp (E17/15)		
13	Install paneling	 Ensure that air ducting (5) is installed correctly.	
14	Screw in bolts (1) and bolt (2).		