

P54.10-2657-09


Illustrated on model 251

- 1 Trim
- 2 Housing cover
- 3 Housing

- 4 Electrical connector
- 5 Catch lugs

X58/1 Interior socket

☒ ☒	Remove/install		
1	Fold up housing lid (2)	<p>i The interior socket (X58/1) is located in the trim (1) on the bottom right-hand side of the cockpit.</p>	
2	Use pliers to detach the interior socket (X58/1) from the housing (3) and pull out (arrow A)	<p>i Do not turn the interior socket (X58/1) when pulling out</p> <p>i Installation: Ensure that the two guides (arrows B) are inserted in the grooves of the housing (3). Slide in the interior socket (X58/1) until it latches in the housing (3) (arrow C).</p> <p>☒ Pliers</p>	<p>*169589003700</p>
3	Disconnect electrical connector (4)		
4	Remove housing (3) from the trim (1)	<p>i Loosen the housing (3) at the two catch lugs (5) and pull out of the trim (1).</p>	
5	Install in the reverse order		

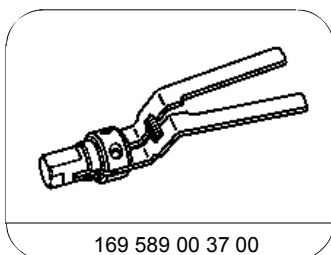

Pliers