

VIN	██████████	Model series/model designation	164████
Order number		License plate	

Full list of fault codes and events

5000	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
5010	Fault during test of emergency tensioning retractor function
5011	The control module was switched off due to excess temperature.
5061	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
5062	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
5160	The codes (right-hand or left-hand drive) stored in control modules A76 (Left front reversible emergency tensioning retractor) and N93 (Central gateway control unit) are not identical.
5161	The control module is incorrectly coded.
5162	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
5163	Code 'Model series' is probably wrong.
5164	Code 'Body version' is probably wrong.
5262	System is overheated.
5352	Model series is not coded in engine control unit.
5353	Design or body type is not coded in engine control unit.
6000	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
6001	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
6004	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
6009	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
600C	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
600D	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
600E	Control unit A76 (Left front reversible emergency tensioning retractor) is defective.
Event 5004	Abort of emergency tensioning retractor function due to excessive supply voltage
Event 5009	Belt tensioning function disabled due to low voltage condition.
Event 5060	CAN communication is faulty.

12/2016 (2016-10-06)\AddOns: ([6988] (7160) (7258) (6755) (6933) (7418) (7176) (6765) (7292) (6726) (6832) (7030) (6815) (6961) (6892) (6927) (6642) (6882) (6977) (6604) (7100) (7128) (6819) (7134) (7069) (6785) (7229) (6669) (6658) (7309) (7188) (6728) (6569) (6843) (6826) (6818) (6997) (6896) (7172) (7092) (6931) (7084) (6951) (6835) (6691) (7014) (6622) (6792) (6828) (6768) (6985) (6721) (6745) (7154) (6677) (7143) (6817) (6919) (6780) (6707) (6686) (6863) (7002) (6991) (6700) (6615) (6803) (6880) (6580) (6646) (6576) (6986) (6814) (6670) (7009) (7018) (6781) (6673) (6877) (6864) (6872) (7033) (7256) (7318) (6730) (7104) (6663) (7147) (6798) (6994) (6858) (6898) (6871) (7386) (6704) (7029) (6822) (6850) (6796) (7065) (6802) (6971) (6874) (7072) (7082) (6746) (7239) (6772) (6857) (6949) (7180) (6831) (7086) (6627) (6916) (7206) (6742) (7042) (6964) (6870) (7166) (7138) (7080) (7398) (6848) (6975) (7001) (6760) (6679) (6845) (6732) (6565) (6941) (6902) (6890) (6847) (6842) (6856) (7359) (6578) (7007) (7185) (7158) (7026) (6894) (6980) (6739) (7119) (6684) (6995) (6816) (6809) (6784) (6972) (6633) (6952) (6648) (6943) (6793) (6981) (7135) (7036) (6608) (6907) (7023) (6861) (7113) (7433) (7209) (7324) (6954) (7097) (6705) (6825) (6968) (6885) (6616) (6573) (6759) (6676) (6682) (6887) (6910) (7226) (6914) (6866) (7360) (6886) (7233) (7108) (6953) (5226) (7267) (7121) (7201) (7063) (6599) (7049) (7216) (6649) (7055) (6774) (6724) (7225) (6990) (6833) (6965) (6906) (6800) (7251) (6962) (6958) (7068) (7071) (6900) (7316) (7289) (6788) (6851) (6709) (6948) (6983) (6769) (6714) (7190) (6924) (6889) (6921) (6911) (7012) (7150) (5225) (7164) (7198) (6588) (6903) (6697) (6596) (6839) (7058) (6790) (7109) (6787) (7052) (6868) (7300) (6653) (7248) (6884) (7032) (6735) (7046) (6876) (6630) (6806) (6904) (6659) (7458) (6867) (7008) (6946) (7184) (6879) (6841) (6912) (6570) (7142) (7077) (6801) (6618) (6976) (73131))

Event 5260	The supply voltage of the control unit is too high (overvoltage).
Event 5261	The supply voltage of the control unit is too low (undervoltage).
Event 5312	Fault in CAN communication with control unit N47-5 (ESP control unit).
Event 5313	Fault in CAN communication with control unit N47-5 (ESP control unit).
Event 5314	Fault in CAN communication with control unit N47-5 (ESP control unit).
Event 5315	Fault in CAN communication with control unit N47-5 (ESP control unit).
Event 5316	Fault in CAN communication with control unit N80 (Steering column module).
Event 5317	Fault in CAN communication with control unit ME motor electronics.
Event 5318	Fault in CAN communication with control unit N93 (Central gateway control unit).
Event 5319	Fault in CAN communication with control unit N93 (Central gateway control unit).
Event 531A	Fault in CAN communication with control unit N73 (EIS [EZS] control unit).
Event 531B	Fault in CAN communication with control unit N15/3 (Electronic transmission control (ETC [EGS])).
Event 531C	Fault in CAN communication with control unit ME motor electronics.
Event 5340	CAN message from control module N47-5 (ESP control unit) is faulty. Left front wheel speed implausible
Event 5341	CAN message from control module N47-5 (ESP control unit) is faulty. Right front wheel speed implausible
Event 5342	CAN message from control module N47-5 (ESP control unit) is faulty. Left rear wheel speed implausible
Event 5343	CAN message from control module N47-5 (ESP control unit) is faulty. Right rear wheel speed implausible
Event 5344	CAN message from control module N47-5 (ESP control unit) is faulty. B24/15 (Micromechanical yaw rate sensor AY pickup)
Event 5345	CAN message from control module N47-5 (ESP control unit) is faulty. B24/15 (Micromechanical yaw rate sensor AY pickup)
Event 5346	CAN message from control module N80 (Steering column module) is faulty. Steering angle
Event 5347	CAN message from control module N93 (Central gateway control unit) is faulty. Left-hand steering or right-hand steering
Event 5348	CAN message from control module N47-5 (ESP control unit) is faulty. Stop lamp switch
Event 5349	CAN message from control module N47-5 (ESP control unit) is faulty. Rotation direction of left front wheel
Event 534A	CAN message from control module N47-5 (ESP control unit) is faulty. Rotation direction of right front wheel
Event 534B	CAN message from control module N47-5 (ESP control unit) is faulty. Rotation direction of left rear wheel
Event 534C	CAN message from control module N47-5 (ESP control unit) is faulty. Rotation direction of right rear wheel
Event 534D	CAN message from control module N2/7 (Restraint systems control unit) is faulty. S68/1 (Seat belt buckle and seat belt warning switch, driver)
Event 534E	CAN message from control module N2/7 (Restraint systems control unit) is faulty. S68/2 (Front passenger seat belt buckle and seat belt warning switch)

Event 534F CAN message from control module N47-5 (ESP control unit) is faulty. Stop lamp switch
Event 5350 CAN message from control module N80 (Steering column module) is faulty. Steering angle
Event 5351 CAN message from control module N47-5 (ESP control unit) is faulty.
Event 5354 CAN message from control module N93 (Central gateway control unit) is faulty. Switch 'Transfer case'
Event 5355 CAN message from control module N15/3 (ETC [EGS] control unit) is faulty.
Event 5356 CAN message from control module N15/3 (ETC [EGS] control unit) is faulty.
Event 5357 CAN message from control module N15/3 (ETC [EGS] control unit) is faulty.
Event 5358 CAN message from control module Engine control module is faulty. Accelerator pedal value
Event 5359 CAN message from control module N80 (Steering column module) is faulty.

Filename: C:\Program
Files\Mercedes-Benz\DAS\bin\..\trees\pkw\SRS\revgsvl2\menues\mnfclistrevgsvl2.s

Cell co-ordinate: 3 , 5