


AR88.70-P-9020GZ	Remove/install mirror lens	23.11.05
------------------	----------------------------	----------

MODEL 164

Shown on vehicle with dimming inside rearview mirror and outside mirror (driver), code 249

- 1 Mirror lens
- 2 Retaining spring
- 3 Electrical connectors for mirror heater
- 4 Electrical connector for mirror dimming

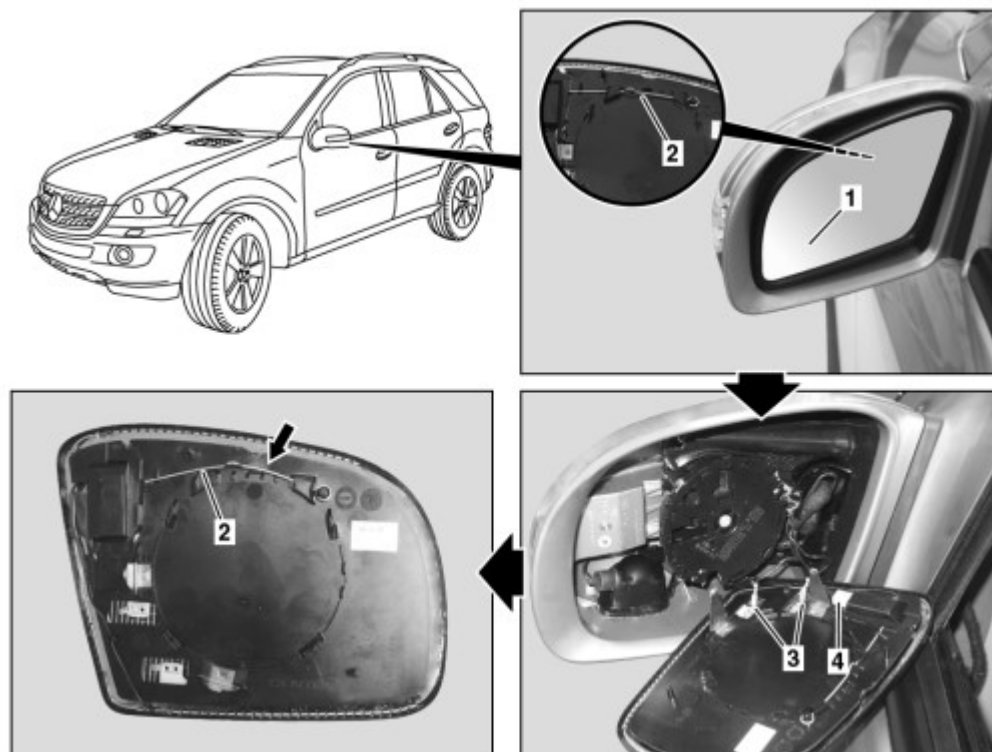

P88.70-2362-06

	Remove/install		
Danger!	Risk of injury. Skin, eye and respiratory system irritation may occur through contact or inhalation of substances contained in the mirror lens.	Wear protective gloves and safety glasses.	AS60.00-Z-0008-01R
1	Switch off ignition and remove transmitter key from EIS [EZS] control unit	On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button	

		repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Tilt mirror lens (1) out upward		
3	Press retaining spring (2) upward with suitable screwdriver and press mirror lens (1) off of mirror adjustment drive.	i Installation: Clip mirror lens (1) into mirror adjustment drive from bottom upward. Observe retaining spring (2), fasteners on mirror lens as well as fasteners on mirror adjustment drive.	
4	Disconnect electrical connectors (3) from mirror heater		
5.1	Disconnect electrical connector from mirror dimming (4)	i On vehicles with automatic dimming inside and outside mirror (driver), code 249.	
6	Install in the reverse order		
7	Clean mirror lens		
8	Carry out function check		