


ENGINES 272.9 (except 272.973) in MODEL 164.1 (except 164.195)

ENGINES 273.9 in MODEL 164.1 /8

- 1 Air cleaner housing
- 1a Housing lower part
- 1b Housing lower part
- 2 Screw
- 3 Air filter element

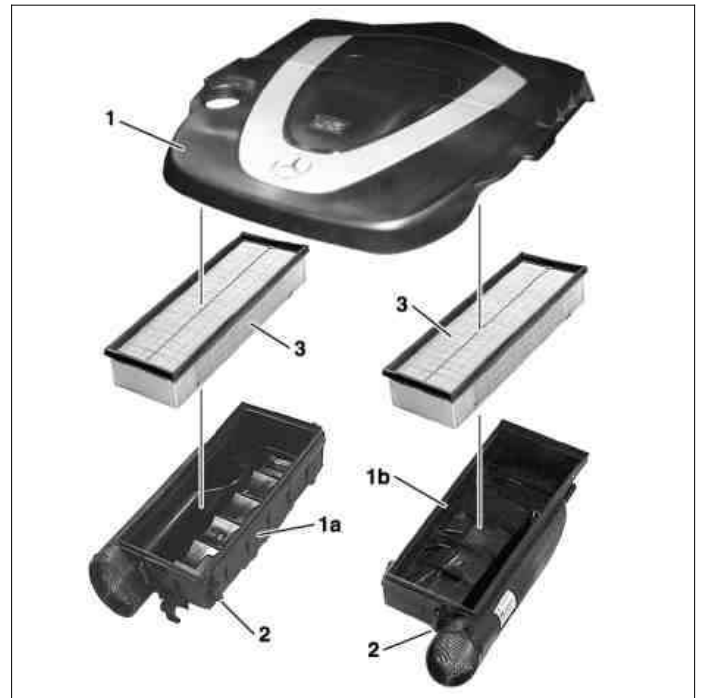

P09.10-2140-12

	Remove/install		
	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
1 	Open engine hood Opening engine hood, moving to upright position and closing		AR88.40-P-1000GZ
2 	Remove air filter housing (1). Remove/install air filter housing	In order to avoid scratches and damage, put down air filter housing (1) on a padded base.	AR09.10-P-1150GZA
3	Slacken bolts (2)	The bolts (2) remain in the lower sections of the housing (1a, 1b).	
4	Remove lower sections (1a, 1b) from the air filter housing (1)		
5	Take out air filter elements (3)	Installation: Replace air filter elements (3), do not clean.	
	Clean		
6	Clean housing lower parts (1a, 1b) and air filter housing (1) on the inside	Cleaner from package	*BR00.45-Z-1028-04A
7	Install in the reverse order		

Repair materials

Number	Designation	Order number
BR00.45-Z-1028-04A	Cleaner from package	Adolph Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 www.wuerth.de