


AR09.10-P-1150GZA

Remove/install air filter housing

25.1.06

ENGINE 272, 273 in MODEL 164

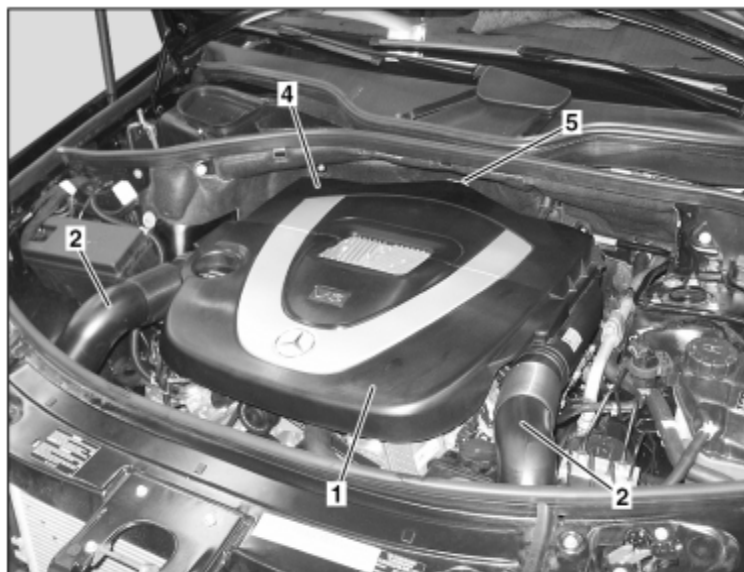




P09.10-2139-08

1 Front engine cover
2 Intake air duct

3 Hose
4 Air filter housing

4a Supports
5 Clamp

	Remove/install		
Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood		AR88.40-P-1000GZ
2.1	Remove reinforcement between wheel assemblies	Model 164.8	AR62.30-P-2500GY
3	Pull off the front engine cover (1) from above.		AR01.10-P-2405GZA

4	Remove left and right intake air duct (2)		
5	Detach the hose (3) of the air pump at the air filter housing (4)	 Installation: The arrows on the hose (3) and the air filter housing (4) must point towards each other.	
6	Lever out the clamp (5) from the air filter housing (4)		
7	Detach air filter housing (4) upwards from mounts (4a) on left and right cylinder head cover	 In order to avoid scratches and damage, the air filter housing (4) must be put down on a padded base.	
		 Installation: Put air filter housing (4) in position carefully so that the sealing ring in the air filter housing (4) is not damaged.	
8	Install in the reverse order		