


ENGINE 642 in MODEL 164

- 1 Engine cover
2 Guides
3 Pin

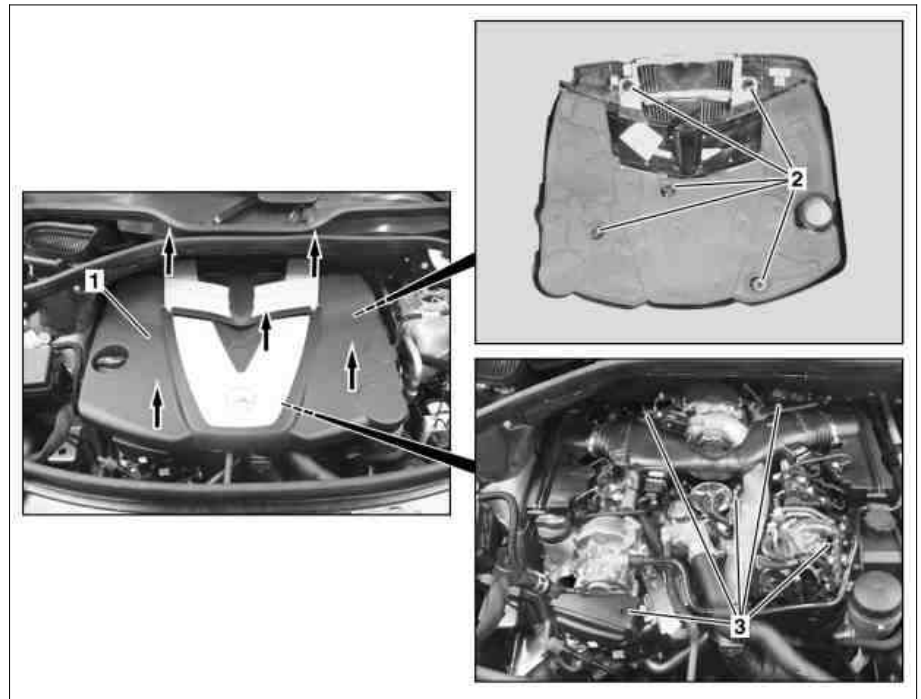

P01.10-2595-06

☒ ☒	Remove/install		
⚠ Danger! 1	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof. Open engine hood and raise to vertical position	Keep body parts and limbs well clear of moving parts. i After closing the engine hood check the locking function, for this step pull engine hood jerkily to the top.	AS00.00-Z-0011-01A AR88.40-P-1000GZ
2.1	Removes spring dome strut	Only for model 164.8 i Remove spring dome strut at spring dome mounts.	AR62.30-P-2500GY
3	Detach engine cover (1) upwards (arrows) from bolt (3) and remove	i Installation: Cover guides (2) with lubricant. Antifriction agent	*BR00.45-Z-1010-06A
4	Install in the reverse order		

Repair materials

Number	Designation	Order number
BR00.45-Z-1010-06A	Lubricant, rubber assembly 1 l	A 000 989 03 67