


## MODEL 164

## Shown on model 164.1

- 1 Trim ring  
 2 Dashboard lower section  
 3 Electrical connectors  
 A2 Radio  
 N73 EIS [EVS] control unit


## Electronic Ignition Switch-EIS

## Elektronischer Zündschalter-EZS

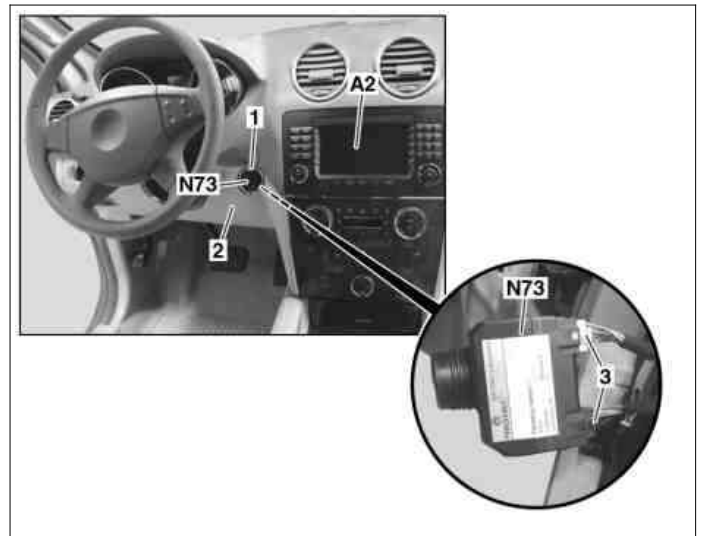

P80.57-2070-11

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1 	<b>Transfer basic data for EIS control unit (N73) in STAR DIAGNOSIS</b> Connect STAR DIAGNOSIS and read out fault memory	<b>Only when replacing EIS control unit (N73).</b>  <b>i</b> <b>Installation:</b> Transfer basic data from STAR DIAGNOSIS to EIS control unit (N73). On vehicles with power glass tilting/sliding roof, code 414 it is essential to perform the teach-in run for anti-pinch protection of sliding roof.	AD00.00-P-2000-04A
2	Remove radio (A2)	<b>i</b> Do not disconnect electrically.	AR82.60-P-7502GZ
3	Remove trim ring (1) with claw wrench from ignition/starter switch	Claw-type wrench for rosette on ignition/starter switch	*210589000700
4	Remove EIS control module (N73) from dashboard bottom section (2) toward rear	<b>i</b> Access through radio installation shaft. <b>i</b> <b>Installation:</b> Observe correct installation position.	
5	Separate electrical connectors (3) and remove EIS control unit (N73)		
6	Install in the reverse order		

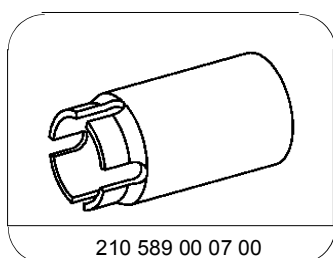

210 589 00 07 00

Claw-type wrench for rosette on ignition/  
starter switch