


MODEL 164
up to model year 2009
with CODE 470 (Tire pressure monitor (base))
without CODE 475 (Tire pressure monitor (Siemens))

MODEL 164
up to model year 2009
with CODE 475 (Tire pressure monitor (Siemens))
without CODE 470 (Tire pressure monitor (base))

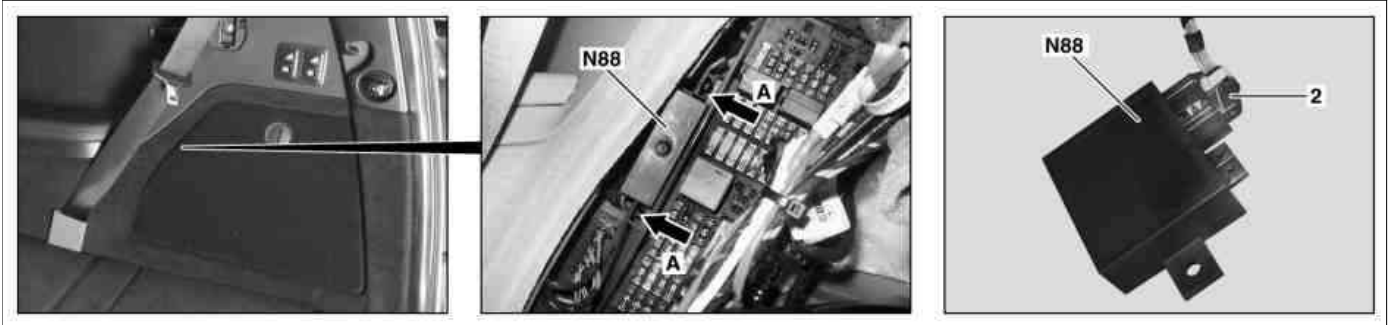

P40.15-2282-07

Shown on model 164.8

2 Connector

N88 TPM [RDK] control unit

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Read out data from TPM [RDK] control unit (N88) using STAR DIAGNOSIS diagnosis system	Only if the TPM [RDK] control unit (N88) is replaced.	
			AD00.00-P-2000-04A
2	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	On vehicles with code (889) KEYLESS-GO: Press keyless go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it at a location beyond its transmission range (at least 2 m).	
3	Remove access flap in load compartment on right		
4	Release locking lugs (arrow A) and pull out TPM [RDK] control unit (N88)		
5	Release and disconnect connector (2), and remove TPM [RDK] control unit (N88)		
6	Install in the reverse order		
7	Transfer previously read-out data to TPM [RDK] control unit (N88) using STAR DIAGNOSIS diagnosis system.	Only if the TPM [RDK] control unit (N88) is replaced.	
			AD00.00-P-2000-04A
8	Activate the tire pressure monitoring system	MODEL 164 up to model year 2009 with CODE 475 (Tire pressure monitor (Siemens)) without CODE 470 (Tire pressure monitor (base))	AR54.30-P-1000-02GZA