


Model 166, 292

Shown on model 166


- 1 Cover
- 2 Screws

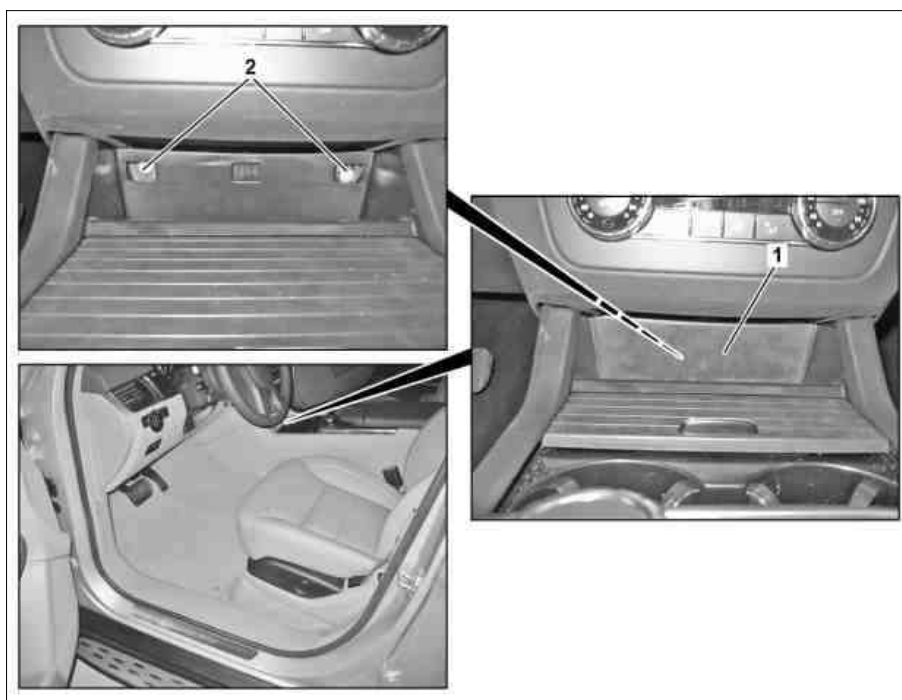

P68.20-4434-06

Shown on model 166


- 3 Cover
- 4 Screws
- 5 Screws
- 6 Trim
- 7 Electrical connectors
- 8 Electrical connectors

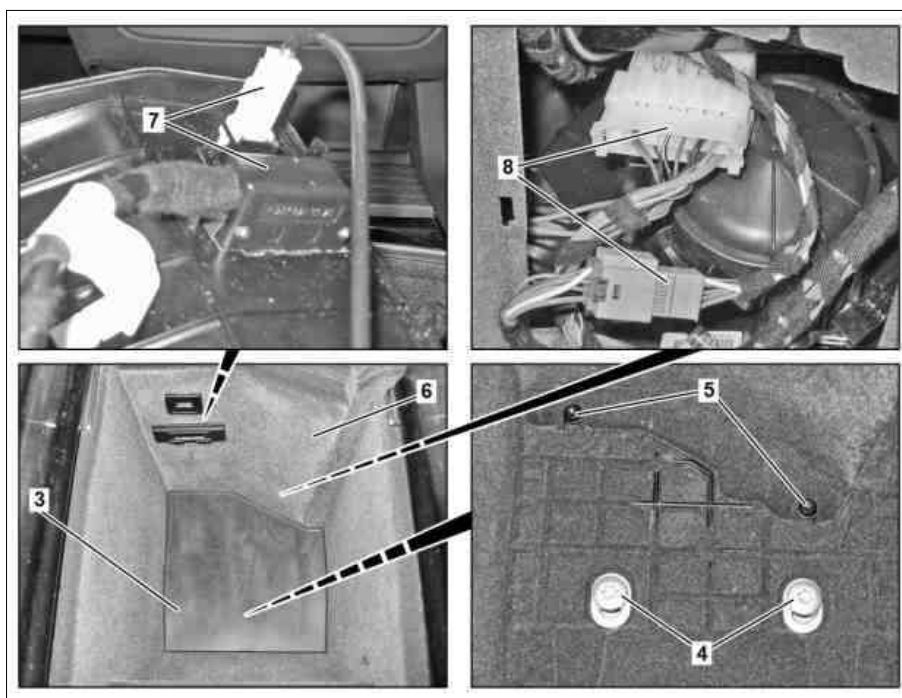

P68.20-4436-06

Shown on model 166

- 9 Cover
- 10 Screws
- 11 Electrical connectors

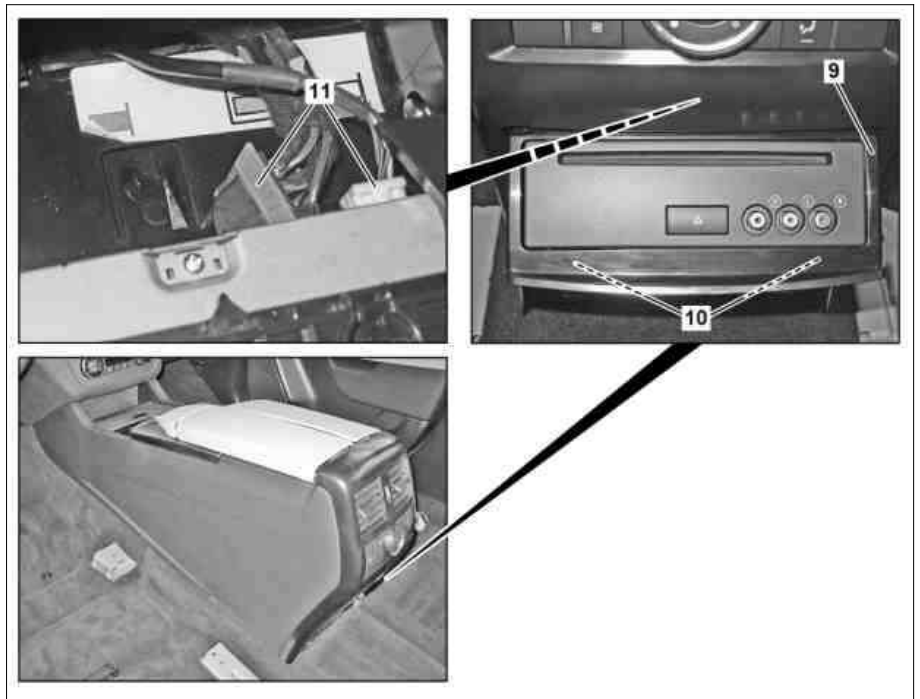

P68.20-4437-06

| | | | |
|-----|--|--|--------------------|
| | Information on preventing damage to electronic components due to electrostatic discharge | | AH54.00-P-0001-01A |
| ☒ ☒ | Remove/install | | |
| 1 | Switch off ignition and store transmitter key outside of transmission range (min. 2 m) | | |
| 2 | Remove cover (1) | | |
| 3 | Remove screws (2) below | | |
| 4 | Remove cover (3) | | |
| 5 | Remove screws (4, 5) below | | |
| 6 | Slightly pull trim (6) upward and remove toward rear | | |
| 7 | Unclip electrical connectors (7) | | |
| 8 | Guide lower electrical connector toward front through opening out of center console | | |
| 9 | Disconnect electrical connectors (8) | | |
| 10 | Pull DVD player downwards | Model 166, 292 with code 864 (Rear compartment entertainment package) i Installation: Ensure that the catch tabs engage audibly. | |
| 11 | Unclip cover (9) | Model 166, 292 with code 864 (Rear compartment entertainment package) i Installation: Ensure that the upper retaining clips are seated correctly. | |
| 12 | Remove screws (10) below | Model 166, 292 with code 864 (Rear compartment entertainment package) | |
| 13 | Slightly pull out DVD player until electrical connectors (11) are accessible | Model 166, 292 with code 864 (Rear compartment entertainment package) | |
| 14 | Disconnect electrical connectors (11) | Model 166, 292 with code 864 (Rear compartment entertainment package) | |
| 15 | Lift center console at rear and remove to front passenger side | i Aid of helper required. | |
| 16 | Install in the reverse order | | |