


Shown on model 164

- 1 Front engine cover
- 2 Intake air ducts
- 3 Covers
- 4 Electrical connectors
- 5 Air cleaner housing
- 6 Retaining clips

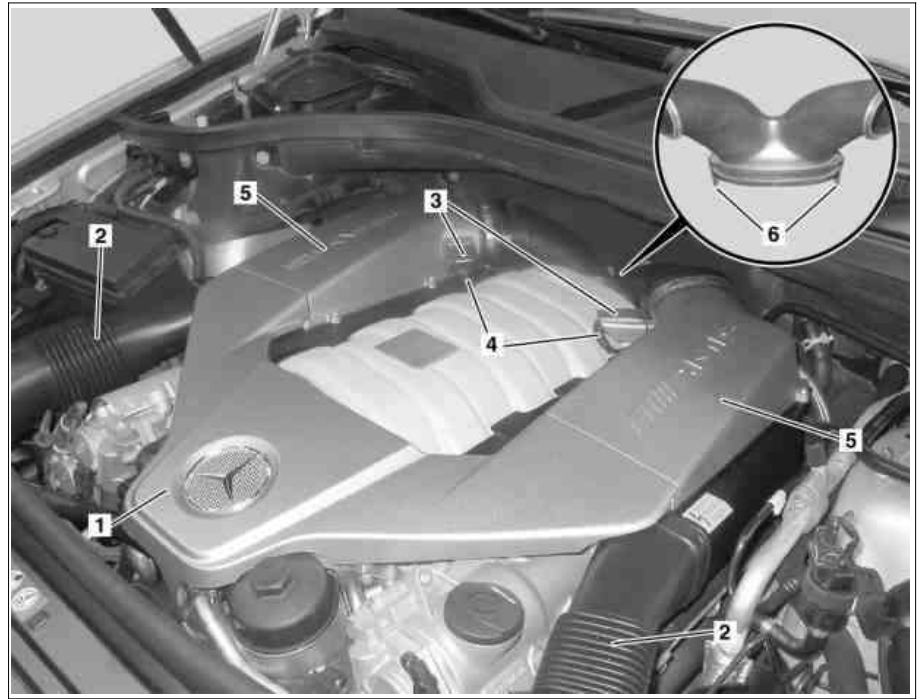

P09.10-2173-06

☒ ☒	Remove/install		
1	<p>Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.</p> <p>Open engine hood and move to vertical position</p>	<p>Keep body parts and limbs well clear of moving parts.</p> <p>Model 164</p> <p>Model 251</p>	<p>AS00.00-Z-0011-01A</p> <p>AR88.40-P-1000GZ</p> <p>AR88.40-P-1000RT</p>
2	Remove partition wall between wheelhouses	Model 251	AR62.30-P-2400RT
3	Remove front engine cover (1)	<p>⚠ Do not tilt front engine cover (1) but instead lift it off vertically, otherwise retaining lugs can break off.</p>	
4	Remove intake air ducts (2)		
5	Unclip covers (3)		
6	Disconnect electrical connectors (4) at hot film mass air flow sensor		
7	Loosen clamps at air filter housing (5)		
8	<p>Unclip retaining clips (6) at intake port</p> <p>BT Intake port altered</p>	<p>⚠ Check sealing ring on intake port; replace if necessary.</p> <p>i Installation: If the intake port is damaged, install an altered intake port.</p>	BT09.10-P-0001-01A
9	Remove both air filter housings (5).	<p>i For model 251 the air filter housing (5) must be installed individually.</p> <p>i Installation: Coat rubber mounts on valve covers with antifriction agent.</p> <p>Lubricating paste</p> <p>i Cover intake opening.</p>	*BR00.45-Z-1002-06A
10	Install in the reverse order		

Repair materials

Number	Designation	Order number
BR00.45-Z-1002-06A	Lubricating paste, rubber parts 2.5 kg, DB supply specification 6867.00	A 000 989 01 60