
6.7.07

## Shown on model 164.1

E1 E1n3	Left front headlamp unit HRA [LWR] power module	
E2	Right front headlamp unit	
E2n3	HRA [LWR] power module	E1n3
		(E2n3)

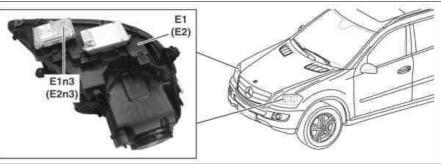

P82.10-4217-04

## Location

The HRA [LWR] power module for the front left lamp unit and the HRA [LWR] power module for the front right lamp unit are located under the housing of each lamp unit.

## Task

The HRA [LWR] power modules actuate, on request from the headlamp range adjustment control unit (N71), the following adjustment motors:

- Left headlamp range adjustment motor (E1m1)
- Right headlamp range adjustment motor (E2m1)
- Left dynamic curve illumination motor (E1m2)
- Right dynamic curve illumination motor (E2m2)

## Right/left detection through plug coding inquiry

After connecting a new HRA [LWR] power module (as backup), the HRA [LWR] power module recognizes the particular installation location by the voltage levels at two connector pins.

After fault-free detection of the installation location the HRA [LWR] power module registers accordingly at the headlamp range adjustment control unit.