GF32.22-P-5102GZ Central reservoir component description 14.2.06

MODEL 164.1 /8

with CODE (489) Airmatic (air suspension with level adjustment and adaptive damping system ADS ) up to Model Year 8

**MODEL** 164.8

with CODE (489) AIRmatic (air suspension with level adjustment without ADS adaptive damping system) with CODE (494) USA version

up to Model Year 8

## Shown on model 164.1

1 AIRmatic central reservoir


## Location

The AIRmatic central reservoirs are mounted under the load compartment.

## Task

Storage of compressed air for the level adjustment system in order to ensure fast adjustment of the vehicle level irrespective of whether or not the compressor is running.

To enable level control without actuating the AIRmatic compressor unit (A9/1) when the vehicle is stationary or at a low speed.

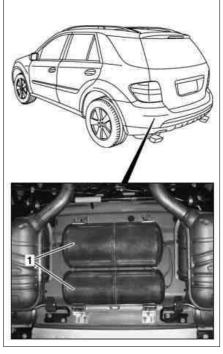

P32.22-2337-03