



**Model 164**  
**with code 581 (Automatic air conditioning)**  
**Model 251**  
**with code 581 (Automatic air conditioning)**

Shown on model 164.195

1 Air duct segment

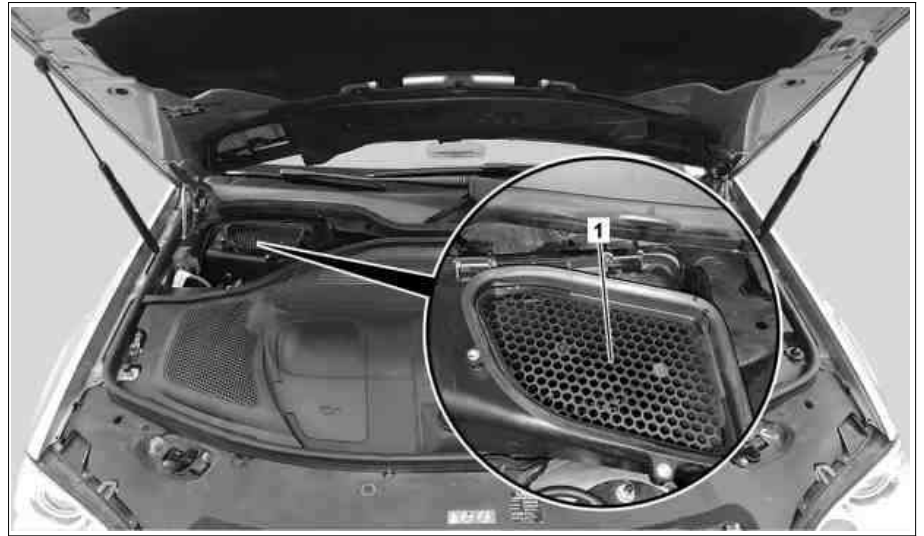

P83.00-2470-05

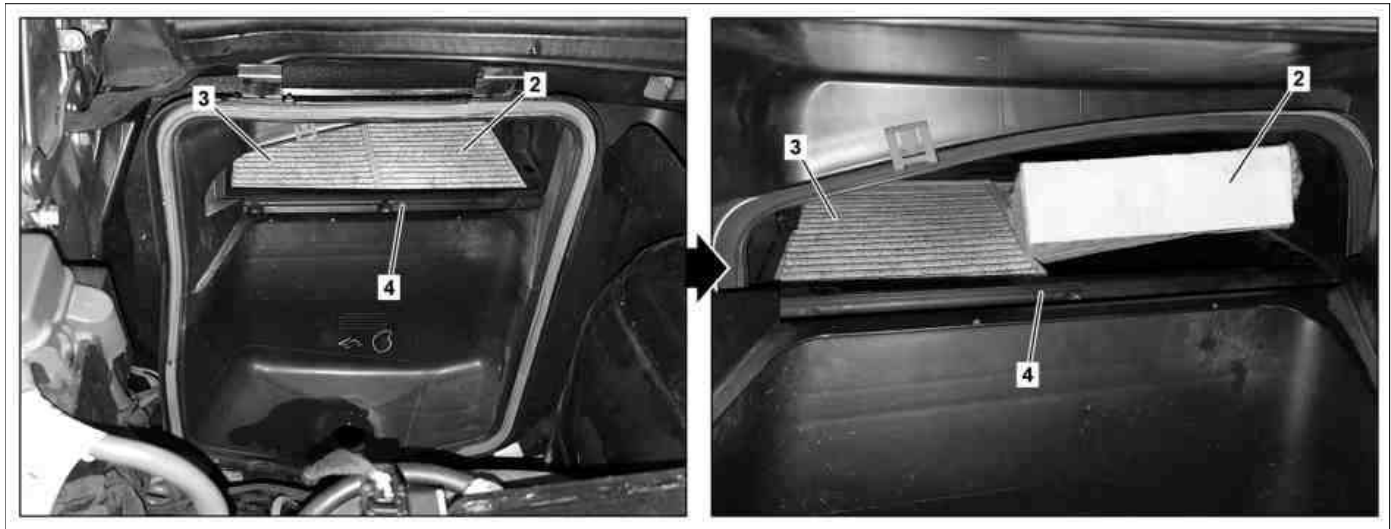

P83.00-2471-08

Shown on model 164.195

2 Left activated charcoal dust filter  
 3 Right activated charcoal dust filter

4 Air filter housing



P83.00-2472-08

Shown on model 164.195

3 Right activated charcoal dust filter

4 Air filter housing

	<b>Remove</b>		
1	Remove air duct segment (1)		
	<b>Clean</b>		
2	Clean area around dust filter housing (4)		
	<b>Remove</b>		
3	Remove activated charcoal particle filter at left (2) from dust filter housing (4)		
4	Slide activated charcoal particle filter at right (3) in direction of arrow, and remove from dust filter housing (4)		
	<b>Install</b>		
5	Place new right activated charcoal dust filter (3) into dust filter housing (4) and slide in opposite direction (arrow) onto guide lugs		Check for correct positioning of new activated charcoal particle filter at right (3) on guide lugs in dust filter housing (4). Damage can otherwise occur.
6	Place new activated charcoal particle filter at left (2) into dust filter housing (4)		Check for correct positioning of new activated charcoal dust filter at left (2) in the dust filter housing (4). Damage can otherwise occur.
7	Install air duct segment (1)		