

| | | | |
|--------------------|--|--|--|
| AD00.00-P-2000-04A | Connect STAR DIAGNOSIS and read out fault memory | | |
|--------------------|--|--|--|

Model 117, 124.034/036, 129, 140, 156, 163, 164, 166, 168, 169, 170, 171.4, 172, 176, 197, 199, 202, 203, 204, 207, 208, 209, 210, 211, 212, 215, 216, 218, 219, 220, 221, 230, 231, 240, 242, 245, 246, 251, 292, 414


Model 461

Model 463

up to model year 2019

Shown on model 210


- 1 Diagnostic connector
- 2 Diagnostic system

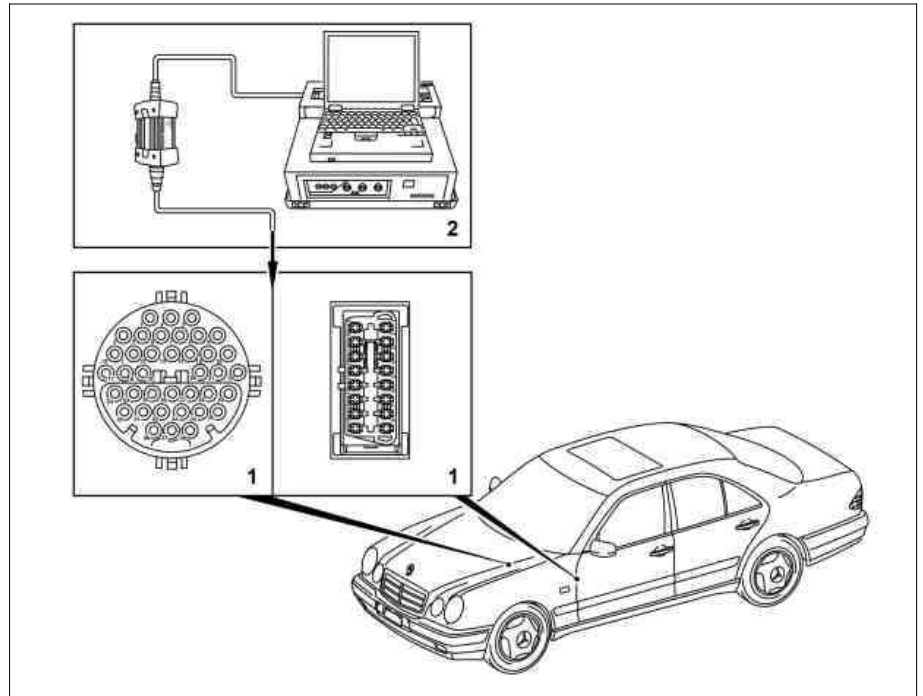

P00.00-5442-06

Shown on model 204

- 1 Diagnostic connector
- 2 Diagnostic system

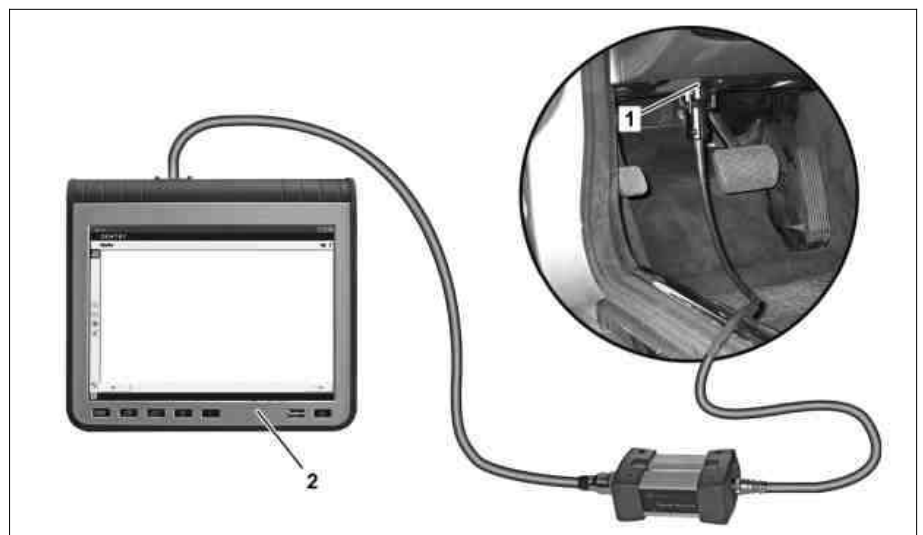

P00.00-5443-05

- 1 Connect diagnostic system (2) to diagnostic connector (1).
- 2 Start diagnosis.
- 3 Select the model series in the menu.
- 4 Disconnect diagnostic system (2).

i Stored faults which may be caused by disconnecting cables or by simulation during testing operations must be deleted in the diagnostic trouble code memory following completion of the operations.

Following completion of diagnostic operations.

i The work procedures in the diagnosis program are menu-assisted.