


## MODEL 164

Shown on model 164.1 with engine 113


- 1 Expansion clips
- 2 Bolts
- 3 Plastic nuts
- 5 Right underfloor paneling

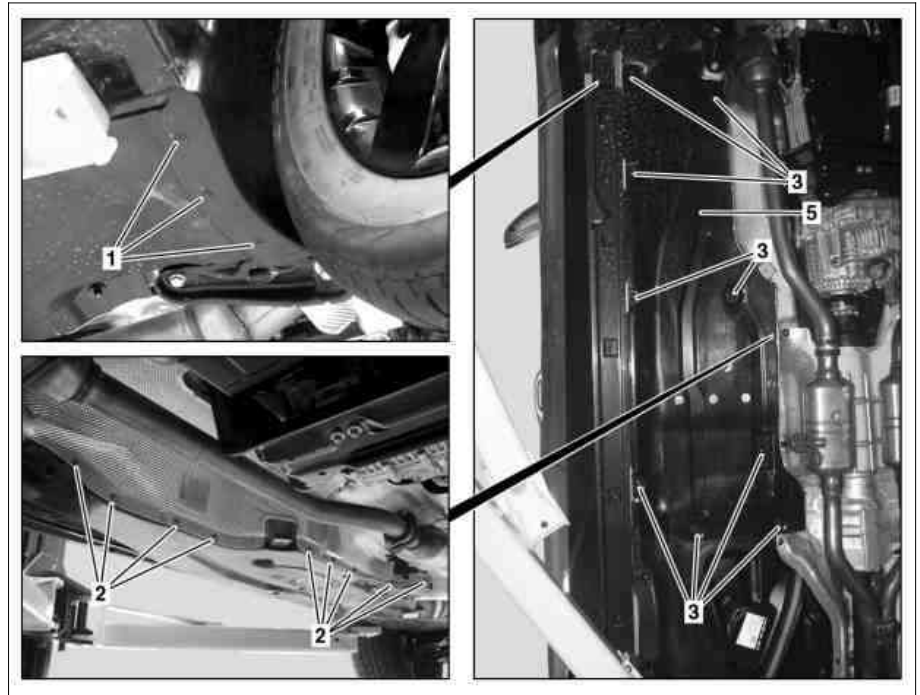


P61.30-2017-06

Shown on model 164.1 with engine 113

- 1 Expansion clips
- 2 Bolts
- 3 Plastic nuts
- 6 Left underfloor paneling

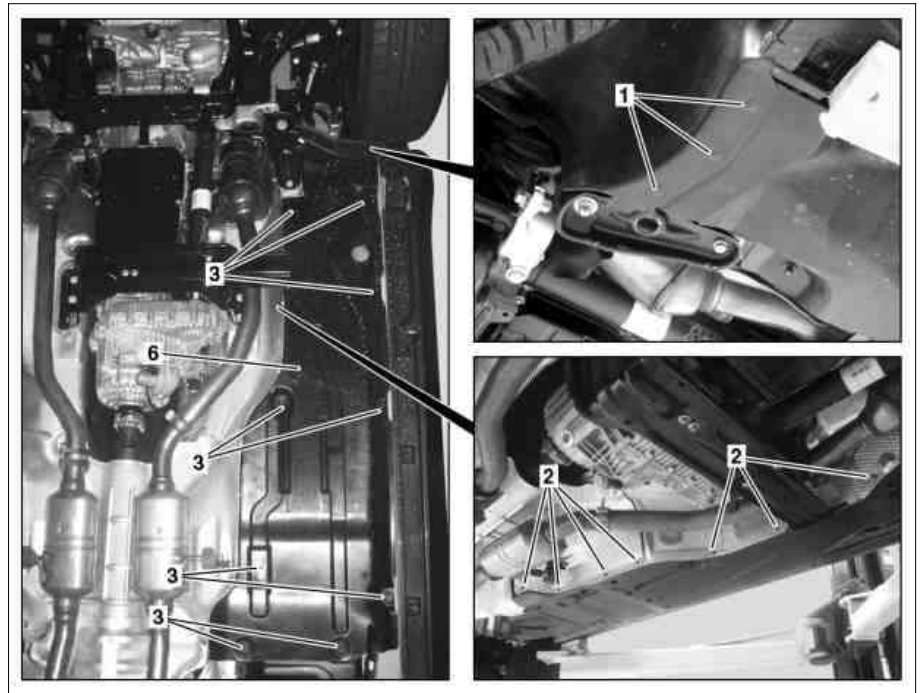

P61.30-2018-06

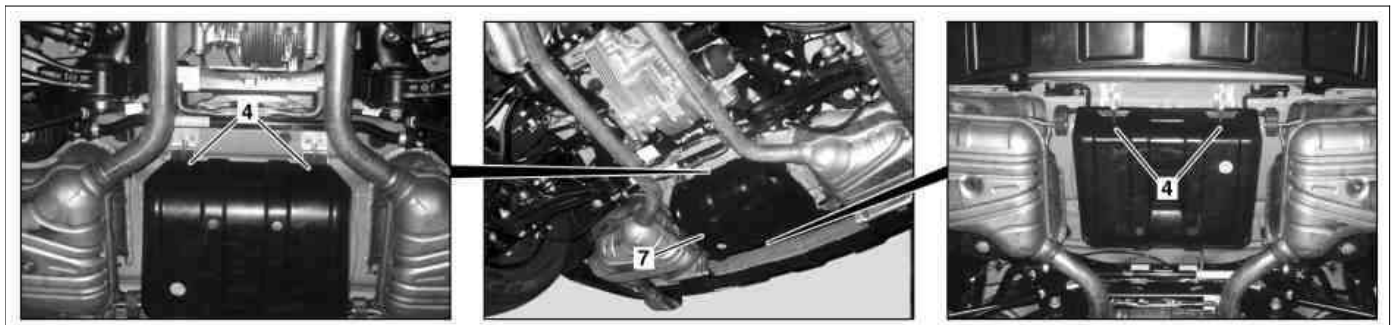

P61.30-2019-07

Shown on model 164.1 with engine 113

- 4 Nuts

- 7 Rear underfloor paneling

☒ ☒	Remove/install		
<b>i</b>	Number and position of expansion clips (1), bolts (2) and plastic nuts (3) can vary according to vehicle model.		
1	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.  Lift/jack up vehicle	Align vehicle between lifting platform columns and position the four mounting plates at the indicated lifting platform attachment points specified by the manufacturer.	AS00.00-Z-0010-01A  AR00.60-P-1000GZ
2	Remove expansion clips (1)		
3	Unscrew bolt (2)		
4	Unscrew plastic nuts (3) and nuts (4), remove left underfloor paneling (6) as well as right underfloor paneling (5) and rear underfloor paneling (7).	<b>i</b> The sections can also be removed separately.	
5	Install in the reverse order		