


MODEL 164 except CODE (889) Keyless go

- 1 Inspection window
- 2 Lock button
- 3 Release button
- 4 Trunk lid remote release button

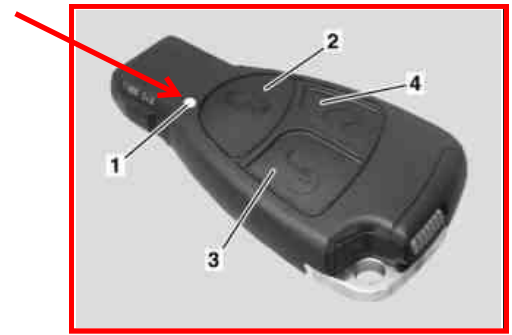

P80.35-2222-01

☐	Check		
1	Hold lock button (2), release button (3) or trunk lid release button (4) for longer than one second	<p>i Ensure that the LED in the inspection window (1) comes on momentarily If necessary: ↓ Replace batteries for transmitter key.</p>	AR80.35-P-4210GZA