

Item	Designation	Co
<u>A49/1</u>	Interference filter 1	21
<u>A49/1x1</u>	Interference filter 1 input connector	21
<u>B4/1</u>	Left fuel level sensor	23 25
<u>B4/1x1</u>	Left tank half fuel level sensor connector	22. 24.
<u>B4/2</u>	Right fuel level sensor	22 25
<u>E3</u>	Left taillamp	45
<u>E3e1</u>	Left turn signal lamp	46
<u>E3e2</u>	Left taillamp and rear fog lamp	45
<u>E3e3</u>	Left backup lamp	45
<u>E3e4</u>	Left stop lamp	47
<u>E3e8</u>	Left taillamp, side-marker lamp, parking lamp	46
<u>E4</u>	Right taillamp	50
<u>E4e1</u>	Right turn signal lamp	48
<u>E4e2</u>	Right taillamp and rear fog lamp	49
<u>E4e3</u>	Right backup lamp	48
<u>E4e4</u>	Right stop lamp	47
<u>E4e8</u>	Right taillamp, side-marker lamp, parking lamp	49
<u>E17/5</u>	Left rear door entrance and exit lamp	30
<u>E17/6</u>	Right rear door entrance and exit lamp	37
<u>E17/27</u>	Rear-end door warning lamp	60
<u>E19/3</u>	Left rear-end door license plate lamp	62
<u>E19/4</u>	Right rear-end door license plate lamp	63
<u>E21</u>	Center high-mounted stop lamp	64
<u>E40/1</u>	Rear-end door ambient lamp	58 59
<u>F4</u>	Load compartment fuse and relay box	19
<u>F33</u>	Battery compartment prefuse box	3L
<u>F33f79</u>	Fuse 79	1K
<u>F33f80</u>	Fuse 80	2K
<u>H3</u>	Alarm signal horn	55
<u>K24/2</u>	Front passenger seat adjustment comfort relay	13
<u>N10/8</u>	Rear SAM control module	4A 12. 20. 28. 36. 44. 52. 60. 67.
<u>N47-5</u>	ESP control module	28
<u>N66/10</u>	Backup camera voltage supply module	42
<u>N70</u>	Overhead control panel control module	11

<u>U63</u>	Valid for seat adjustment without memory	12
<u>U151</u>	Valid for engine 113	28 54
<u>U152</u>	Valid for engine 156	24
<u>U153</u>	Valid for all except engine 156	22
<u>U154</u>	Valid for 164.1	5D 38 50
<u>U155</u>	Valid for 164.8	6E 40 51
<u>U656</u>	Valid for interior light package	57
<u>U681</u>	Valid for all except M113	27 54
<u>U805</u>	Not valid on vehicles with automatic rear-end door or loading floor	59
<u>U899</u>	Valid for backup camera	41
<u>W6</u>	Ground (left wheelhousing in trunk)	45
<u>W7</u>	Ground (right wheelhousing in trunk)	1E 51 53
<u>W8</u>	Ground (tailgate)	58 60 63
<u>W15/2</u>	Ground (left footwell)	33
<u>W16/3</u>	Ground (output ground - component compartment - left)	56
<u>W17</u>	Ground (right rear seat)	39
<u>W17/3</u>	Ground 2 (right rear seat)	35
<u>W29/9</u>	Ground, right D-pillar	62
<u>X8/16</u>	Left rear door printed wiring harness connector	30
<u>X8/17</u>	Right rear door printed wiring harness connector	36
<u>X18/2</u>	Interior/roof connector	10
<u>X18/3</u>	Interior/fuel tank connector	23
<u>X25/2</u>	Engine compartment/interior compartment connector	27 28 54 56
<u>X30/4</u>	Right voltage distributor (CAN) connector	7L
<u>X30/5</u>	Left voltage distributor (CAN) connector	7L
<u>X35/3</u>	Left rear door separation point	30
<u>X35/4</u>	Right rear door separation point	36
<u>X55/4</u>	Right front seat contacting strip	13
<u>Z6/12</u>	Left rear door ground connector sleeve	31
<u>Z6/13</u>	Right rear door ground connector sleeve	38
<u>Z50/5</u>	Circuit 15 connector sleeve	19
<u>Z55/1</u>	Circuit 31 rear-end door connector sleeve	62
<u>Z55/4</u>	Rear-end door warning lamp terminal connector	60
<u>Z204/2</u>	Circuit 31 right wheelhouse luggage compartment voltage distributor connector	52
<u>Z204/4</u>	Circuit 31 right footwell voltage distributor connector	40

Z204/7 Circuit 31 left footwell voltage distributor connector (2)

33