

<b>Item</b>	<b>Designation</b>	<b>Coo</b>
<u>B28/8</u>	Pressure differential sensor (DPF)	24L
<u>B37</u>	Accelerator pedal sensor	22L
<u>F4</u>	Load compartment fuse and relay box	28L
<u>F4f57</u>	Fuse 57	28L
<u>F4kO</u>	Fuel pump relay module	27L
<u>F32</u>	Front prefuse	15L
<u>F32f7</u>	Fuse 7	14K
<u>F58</u>	Engine compartment fuse and relay box	3L 10L
<u>F58f101</u>	Fuse 101	8L
<u>F58f103</u>	Fuse 103	7L
<u>F58f105</u>	Fuse 105	1L
<u>F58f120</u>	Fuse 120	4L
<u>F58kD</u>	Engine circuit 87 relay	6L
<u>M4/7</u>	Electric suction fan engine and AC with integrated control	12L
<u>M4/7x1</u>	Engine and AC electric suction fan with integrated control connector 1	11H
<u>N3/9</u>	CDI control module	4A 12A 20A 27A
<u>W2/1</u>	Ground (right front - fan)	11L
<u>W16/3</u>	Ground (output ground - component compartment - left)	3E
<u>X25/2</u>	Engine compartment/interior compartment connector	18H 23E
<u>X30/19</u>	Passenger-side voltage distributor (CAN C) connector	19L

