


Model 164
up to model year 2009

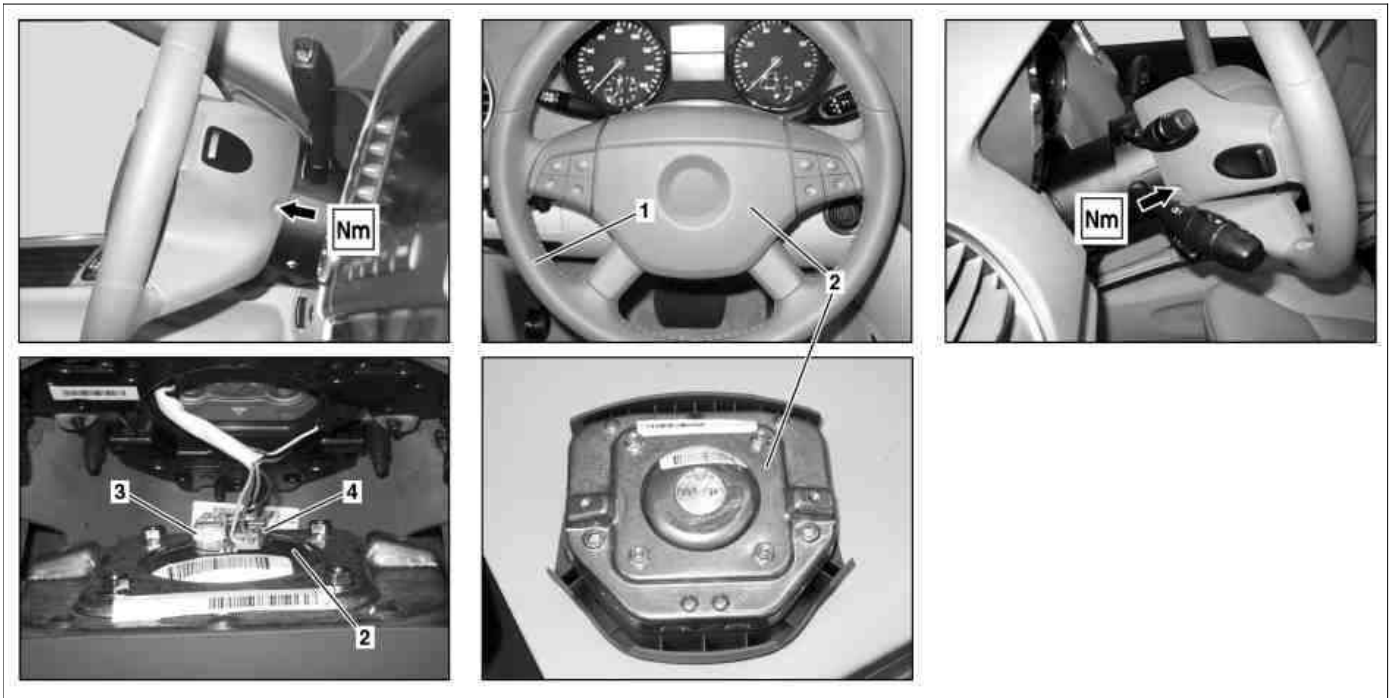


P91.60-2915-09

1 Steering wheel
2 Driver airbag

3 Electrical connector
4 Electrical connector


	Warning	Risk of injury during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.	AS91.00-Z-0008-01A
		Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
		Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
		Remove/install		
1		Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
2		Disconnect battery ground line		AR54.10-P-0003GZ
3		Insert screwdriver bit into openings (arrows) at back of steering wheel (1) and remove screws/bolts from driver airbag (2)	Screw/bolt, airbag to steering wheel Screwdriver bit	*BA91.60-P-1003-01H *126589001000
4		Lift driver airbag (2) from steering wheel (1)		
5		Release and disconnect electrical connectors (3, 4)	Removal lever	*203589043300
6		Remove driver airbag (2) from steering wheel (1)		
7		Install in the reverse order		
		Check		
8		Check and erase vehicle fault memory using the diagnostic system	When replacing the driver airbag (2).	AD00.00-P-2000-04A

Number	Designation	Model 164.1/8
BA91.60-P-1003-01H	Screw/bolt, airbag to steering wheel	Nm 8

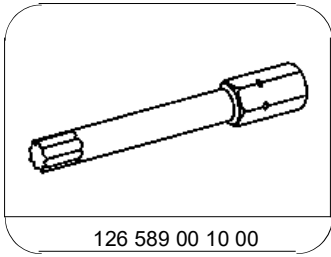

126 589 00 10 00

Screwdriver bit

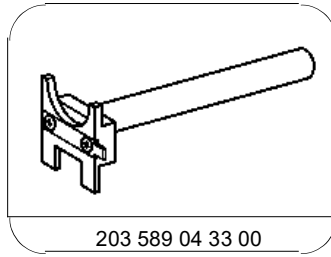

203 589 04 33 00

Removal lever