


Model 164

Modification notes

26.04.2017	Supporting joint can only be changed in model 164.	Model 166, 292 removed.	
------------	--	-------------------------	--

- 1 Wheel carrier
- 2 Brake cover plate
- 3 Supporting joint
- 4 Lock nut

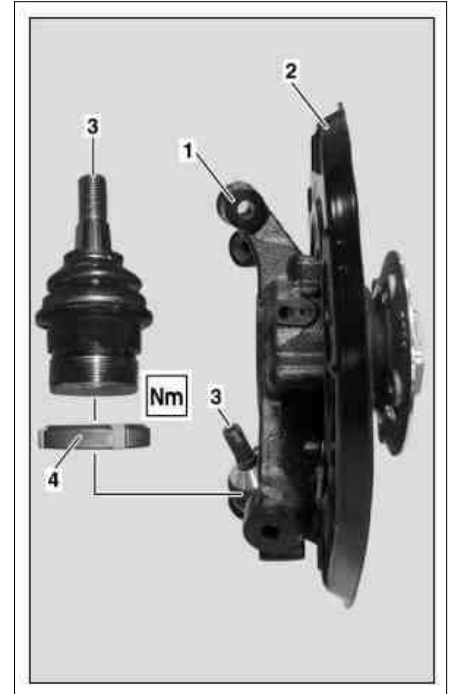


P35.20-2240-03

	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	Remove/install		
1	Remove wheel carrier (1)		AR35.20-P-0115GZ
2	Release brake cover plate (2) and turn over		
3	Press supporting joint (3) out of wheel carrier (1)	<p>Model 164</p> <p> When working on aluminum parts of the rear axle, take care not to make scratches, superficial cracks and notches. Otherwise the service life of the of the parts will be reduced.</p> <p> Installation: Lock nut (4) must be replaced.</p> <p> Slotted lock nut, supporting joint to wheel carrier (replacement part)</p> <p> Removal and installation tool</p> <p> Claw wrench</p> <p> Hand pump</p> <p> Hollow cylinder</p> <p> Hydraulic hose (complete)</p>	<p>AR33.20-P-0440-01GZ</p> <p>*BA35.15-P-1006-02D</p> <p>*164589034300</p> <p>*385589000700</p> <p>*652589003321</p> <p>*652589003322</p> <p>*652589003323</p>
4	Install in the reverse order		


Trailing arms, transverse control arms

Number	Designation	Model 164.1/8
BA35.15-P-1006-02D	Slotted lock nut, supporting joint to wheel carrier (replacement part) Nm	300

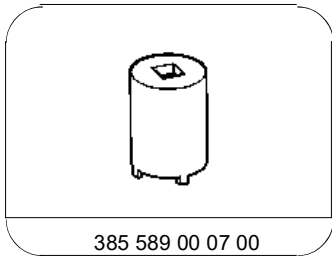


385 589 00 07 00

Claw wrench

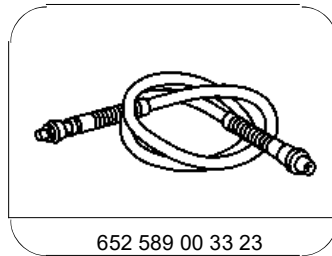


652 589 00 33 23

Hydraulic hose (complete)

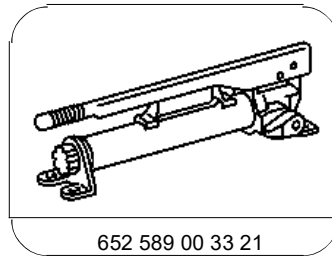


652 589 00 33 21

Hand pump

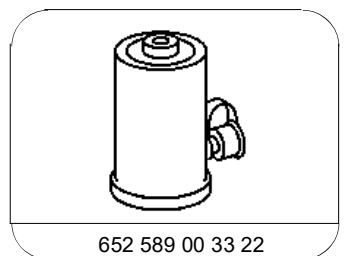

652 589 00 33 22

Hollow cylinder

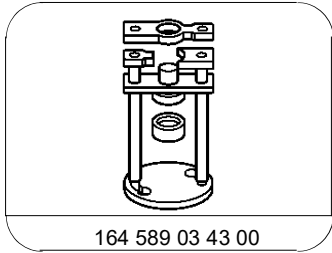

164 589 03 43 00

Removal and installation tool