

Item	Designation	Coor
<u>A9</u>	AC compressor	15L 17L 20L 24L
<u>A9x1</u>	AC compressor connector	14K 20K
<u>A32</u>	AC recirculation unit	35L
<u>A32m1</u>	Blower motor	34L
<u>A32n1</u>	Blower regulator	36L
<u>B10/6</u>	Evaporator temperature sensor	29L
<u>B10/7</u>	Center rear interior temperature sensor	65L
<u>B10/31</u>	Left side outlet temperature sensor	67L
<u>B10/32</u>	Right side outlet temperature sensor	66L
<u>B10/33</u>	Left center outlet temperature sensor	70L
<u>B10/34</u>	Right center outlet temperature sensor	69L
<u>B10/35</u>	Left footwell temperature sensor	68L
<u>B10/36</u>	Right footwell temperature sensor	27L
<u>B11/12</u>	Dew point sensor	37L
<u>B12</u>	Refrigerant pressure sensor	11L
<u>B14</u>	Ambient temperature display temperature sensor	80A
<u>B14x1</u>	Ambient temperature indicator temperature sensor connector	79C
<u>B31</u>	Emissions sensor	26L
<u>B32/3</u>	Dual sun sensor	76L
<u>F3</u>	Cockpit fuse box	2L
<u>F3f10</u>	Fuse 10	4L
<u>F3f12</u>	Fuse 12	1L
<u>F33</u>	Battery compartment prefuse box	32L 55L
<u>F33f78</u>	Fuse 78	55K
<u>F33f91</u>	Fuse 91	31L
<u>M2/1</u>	Booster blower motor	8L
<u>M2/5</u>	Fresh air/recirculated air flaps actuator motor	39L
<u>M2/6</u>	Left blending air flap actuator	48L
<u>M2/7</u>	Right blending air flap actuator	42L
<u>M2/8</u>	Left defroster vent flap actuator motor	46L
<u>M2/9</u>	Right defroster vent flap actuator motor	43L
<u>M2/10</u>	Left footwell flap actuator motor	49L
<u>M2/11</u>	Right footwell flap actuator motor	40L
<u>M2/12</u>	Rear shutoff flap actuator motor	51L
<u>M2/21</u>	Rear air distribution flap actuator motor	63L
<u>M13</u>	Coolant circulation pump	10L
<u>M16/23</u>	Left center air flap actuator motor	57L
<u>M16/24</u>	Right center air flap actuator motor	61L
<u>M16/27</u>	Diverter flap actuator motor	45L

<u>N22/7</u>	Comfort AAC pushbutton control module	4A 12A 20A 28A 35A 43A 51A 63A 70A 78A
<u>N29/2</u>	Booster blower electronic blower controller	6L
<u>N29/2x1</u>	Rear automatic climate control electronic blower regulator connector	7J
<u>R22/3</u>	PTC heater booster	53L
<u>U30</u>	Valid for heater booster	52E
<u>U127</u>	Valid for engine 272, engine 273 KE	21H
<u>U151</u>	Valid for engine 113	9E 13F 18H 78F
<u>U152</u>	Valid for engine 156	21H
<u>U475</u>	Valid for M 272	15F
<u>U681</u>	Valid for all except M113	9F 78E
<u>U880</u>	Valid for engine 642	21H
<u>W9</u>	Ground (at left headlamp unit)	10G
<u>W29/2</u>	Ground (right A-pillar)	2E 35G
<u>W52/7</u>	Ground (PTC heater booster)	54G
<u>X18</u>	Interior/cockpit connector	9E 30H 78E
<u>X18/7</u>	Interior/engine connector	22J
<u>X25/2</u>	Engine compartment/interior compartment connector	9H 13H 16H 22G 25H 78H
<u>X26</u>	Interior and engine wiring harness connector	13J 16J 19J 22K 22K
<u>X26/32</u>	Left front engine compartment/bumper connector	77K
<u>X30/6</u>	Cockpit voltage distributor (CAN) connector	73L
<u>X122/1</u>	Center air outlet connector	56H 69H
<u>X122/2</u>	Booster blower connector (air conditioning)	4E 62H
<u>X122/4</u>	Cockpit AC connector	45E
<u>Z68/1</u>	AC-LIN bus ground (-) COC	43E 58E
<u>Z68/2</u>	AC-LIN bus Ub (+) COC	44E

		63E
<u>Z68/5</u>	AC-LIN bus ground (-) center vent	58L
<u>Z68/6</u>	AC-LIN bus Ub (+) center vent	59L
<u>Z68/7</u>	Cockpit AC system sensor ground	28E 69E
<u>Z68/9</u>	Rear air conditioning blower regulator diagnosis connector sleeve	6G