



P80.50-2497-09

Shown on model 164.1 with engine 272

- 1 Engine partition wall seal
- 2 Bolts
- 3 Cover
- 4 Bracket
- 5 Wiring harness

- 6 Nut
- 7 Bolts

H3 Alarm signal horn

☒ ☒	Remove/install	
1	Partially loosen engine partition wall seal (1)	i In right area.
2.1	Remove wiring harness (5) from bracket (4)	i If present.
3	Unscrew bolts (2) and remove cover (3).	i Installation: The cover (3) has an additional retaining lug in the rear area. It should reach into a corresponding lug in the bottom section of the dividing wall.
4	Unscrew nut (6) and remove alarm signal horn (H3)	
5	Unscrew bolts (7) to disconnect alarm signal horn (H3) electrically.	
6	Remove alarm signal horn (H3)	
7	Install in the reverse order	