

Transmission 722.9 in model 164, 166.0, 251
Transmission 722.9, 725.0 in model 292
Transmission 724.2 in model 166
Transmission 725.0 in model 166, 167


Shown on TRANSMISSION 722.9

- 1 Remove bolt (1) and remove heat shield (2) downward.
- 2 Press cable bracket (4) out of heat shield (2) and remove heat shield (2).

The leaf spring (3) must be modified if a new transmission is installed.

i Installation: The heat shield (2) must be located below the leaf spring (3).

- 3 Install in the reverse order.

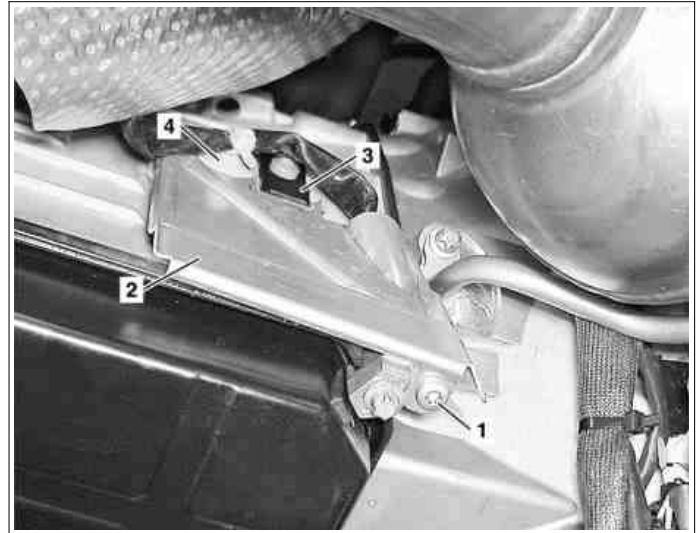

P27.40-2037-11