


ENGINE 113.964 in MODEL 164.175

- 1 Intake air ducts
- 2 Supports
- 3 Supports
- 4 Air cleaner housing

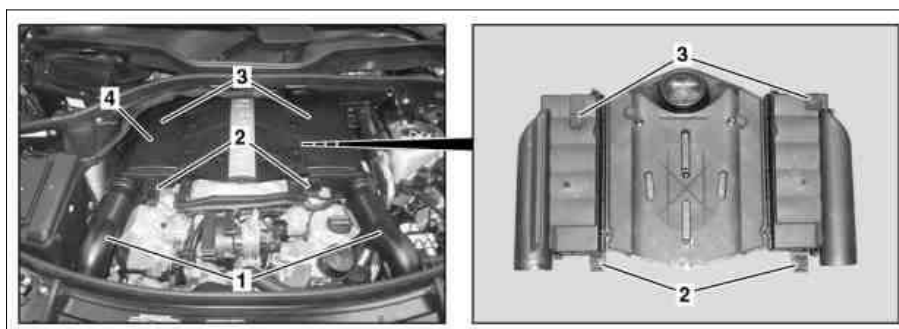

P09.10-2118-04

☒ ☒	Remove/Install		
1	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof. Open engine hood	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
2	Remove engine trim panel		AR88.40-P-1000GZ
3	Remove intake air ducts (1)		AR01.10-P-2405GZ
4	Detach the air cleaner housing (4) upwards from the mounts (2) at the left and right cylinder head cover		
5	Detach the air cleaner housing (4) upwards from the mounts (3) at the left and right cylinder head cover	⚠ In order to avoid scratches and damage, the air cleaner housing (4) must be put down on a padded base.	
6	Install in the reverse order		