

**Transmission**      **722.9 in model 164, 166.0, 251**  
**Transmission**      **722.9, 725.0 in model 292**  
**Transmission**      **724.2 in model 166**  
**Transmission**      **725.0 in model 166, 167**

**Shown on TRANSMISSION 722.9**

- 1 Remove bolt (1) and remove heat shield (2) downward.
- 2 Press cable bracket (4) out of heat shield (2) and remove heat shield (2).

The leaf spring (3) must be modified if a new transmission is installed.

**i** **Installation:** The heat shield (2) must be located below the leaf spring (3).

- 3 Install in the reverse order.



P27.40-2037-11