



MODEL 164

Mechanically adjustable head restraint

- 1 Head restraint
- 2 Release button

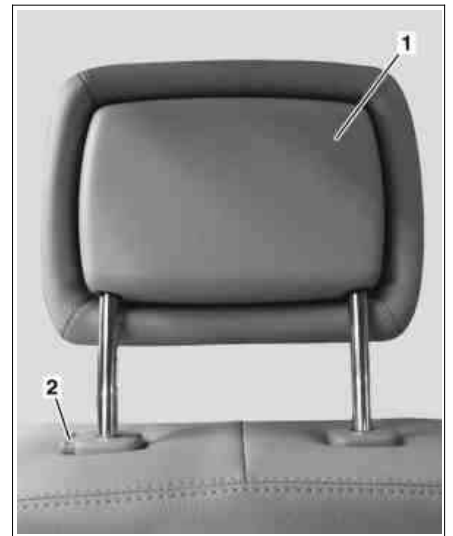

P91.16-2351-02

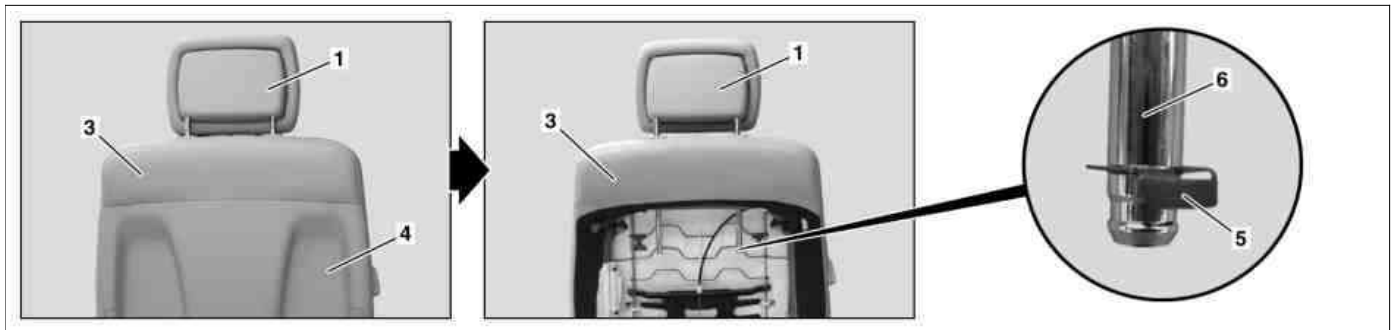

P91.16-2350-07

- 1 Head restraint
- 3 Front seat backrest
- 4 Back shell
- 5 Clip
- 6 Guide

Modification notes

26.7.06	"Disconnect/connect battery ground line" removed	Step 2	
---------	--	--------	--

Icons	Remove/install		
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove back shell (4) from the front seat backrest		AR91.10-P-1915GZ
2	Unclip clip (5) from guide (6) of head restraint		
3	Disconnect electrical connector	i Vehicles with code 438 NECK-PRO.	
4	Tilt front seat backrest (3) backwards		
5	Press release button (2) and pull out head restraint (1) upwards	⚠ Carefully remove head restraint (1) to avoid damaging the headliner.	
6	Install in the reverse order		