
ENGINES 642 in MODEL 164, 251

- 1 Engine air intake duct downstream of air filter
- 2 Air cleaner housing
- 3 Hose
- 4 Hose clamp
- 5 Hose clamp

B2/6 Left hot film MAF sensorB2/7 Right hot film MAF sensorR39/1 Vent line heater element

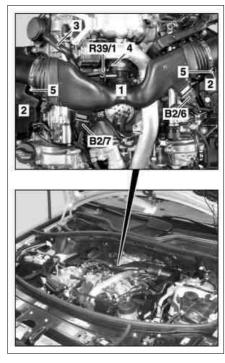

P09.10-2152-03

Modification notes

_				
2	21.7.10	"Connect STAR DIAGNOSIS and reset values in engine	Step 9	
		control unit" added		
		control unit added		

XX	Remove/install		
	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1.1	Remove right air filter housing (2)	On vehicles with side-installed air filter element	
		Model 164	AR09.10-P-1150GZC
		Model 251	AR09.10-P-1150RTC
1.2	Remove left and right air filter element	For vehicles with top mounted air filter elements	AP09.10-P-0980GZB
		(b) Installation: Ensure that seal is correctly installed between air filter housing and engine air intake duct downstream of air filter (1)	
2	Disconnect electrical connectors at left and right hot film mass air flow sensors (B2/6, B2/7)		
3	Disconnect electrical connector from vent line heater element (R39/1)	For vehicles with a heated bleed line	
4	Detach hose (3) of the crankcase ventilation system at the cyclone separator		
5	Slacken hose clamp (4) at turbocharger		
6	Loosen hose clamp (5) at air filter housing (2) on the left	On vehicles with side-installed air filter element	
7	Pull engine air intake duct forwards downstream of air filter (1)	To prevent damage occurring ensure that the flexible boots on the engine air intake duct downstream of air filter (1) are not tensioned.	
		(i) Installation: Do not crush the sealing ring between the turbocharger and the engine intake air duct downstream of the air filter (1). Parts of the crushed sealing ring will damage the turbocharger	
		i When replacing the vent line heater element (R39/1), rubber gasket at engine	
		intake air duct downstream of air filter (1) must be installed first. Ensure grease-free assembly of vent line	
	L/10/19, ar09.10-p-8130gzb, Remove/install engine intake air duct downs	heater element (R39/1) and sealing ring.	Page

8	Install in the reverse order		
9	Connect STAR DIAGNOSIS and reset value in engine control unit	When replacing hot film MAF sensor (B2/6 or B2/7) reset value for HFM-SFI drift compensation. Select following menu item: Control unit Adaptations Learning processes HFM-SFI: hot film sequential multiport fuel injection / ignition system	