


## MODEL 164

## Shown on model 164.1

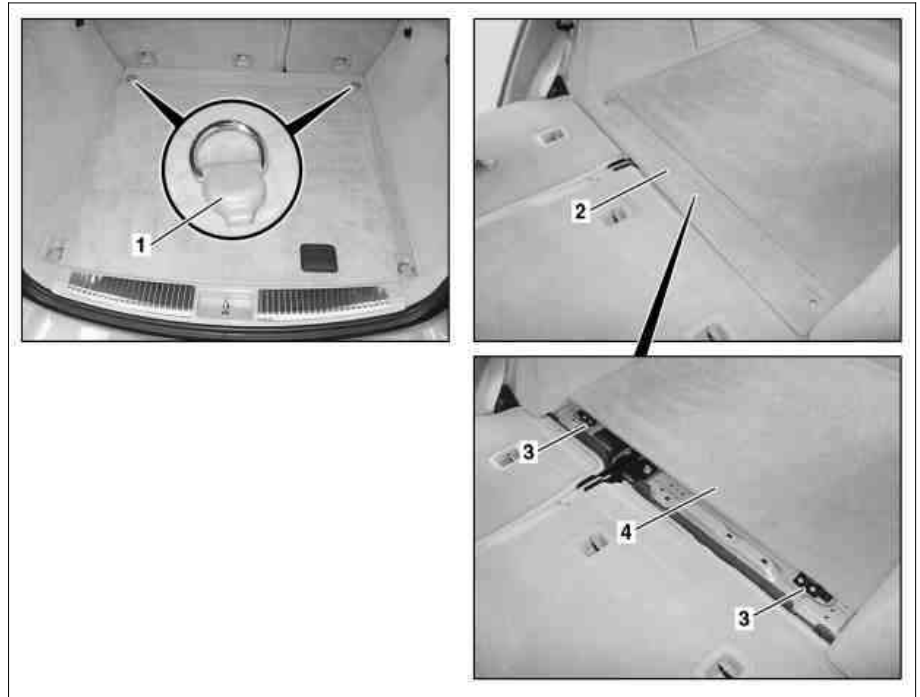

- 1 Anchoring lug
- 2 Load compartment cover
- 3 Bolts
- 4 Load compartment floor



P68.80-2034-06


## Modification notes

2.7.09	Remove high-voltage battery cover	Step 3.2	AR68.80-P-6000GZH
--------	-----------------------------------	----------	-------------------

 	Remove/install		
1	Fold over 2nd seat row.		
2	Fold over 3rd seat row.	Model 164.8	
3.1	Unclip cover from anchoring lug (1) and unscrew bolt below	except model 164.195	<a href="#">*BA68.50-P-1002-03F</a> <a href="#">*110589035900</a>
3.2	Remove high-voltage battery cover	Model 164.195	AR68.80-P-6000GZH
4	Unscrew load compartment cover (2) and remove	except model 164.195	<a href="#">*110589035900</a>
5	Remove bolts (3) on left and right from load compartment floor (4)		
6	Remove load compartment floor (4)		
7	Install in the reverse order		

 Cargo retainers

Number	Designation	Model 164.1/8
BA68.50-P-1002-03F	Bolt, anchoring lug to luggage compartment floor	Nm 24

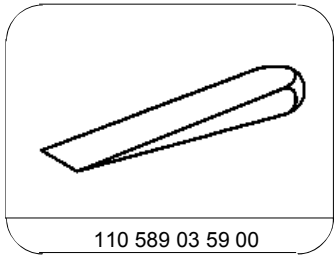

110 589 03 59 00

Mounting wedge