
MODEL 164

(Floor covering, 2nd seat row)

## Shown on model 164.1

- Bottom B-pillar paneling 1
- 2 3 Cover
- Covers
- 4 5 Bolts
- Center console
- Rear floor covering

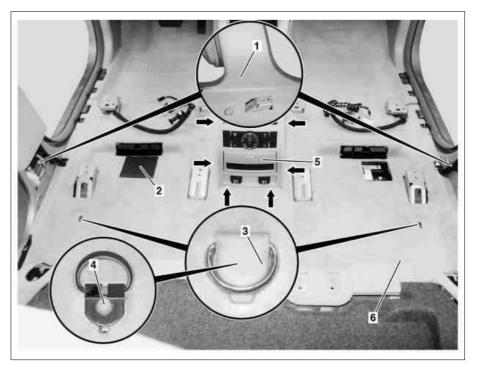


P68.20-3272-06

XX	Remove/install		
1	Remove both front seats		AR91.10-P-1000GZ
2	Remove door sill moldings	i On all doors.	AR68.30-P-4100GZ
3.1	Remove seat cushion from 60 % rear seat	<b>i</b> On model 164.1.	AR91.12-P-1020GZA
3.2	Remove front bottom cover from 60 % rear seat	i On model 164.8.	
4.1	Remove seat cushion from 40 % rear seat	<b>i</b> On model 164.1.	AR91.12-P-1020GZ
4.2	Remove front bottom plastic cover from 40 % rear seat	i On model 164.8.	
5	Unclip bottom B-pillar paneling (1) on both sides	i Position upper long wedge at lower B-pillar.	
		S Long wedge	*115589035900
6	Unclip cover (2)	i If present.	
7	Unclip covers (3)		
8	Remove bolts (4)	Nm	*BA68.50-P-1002-03F
9	Pull rear floor covering (6) out below center console (5)	Installation: Carefully raise center console (5) with long wedge (arrows) to prevent damage	
		S Long wedge	*115589035900
10	Remove rear floor covering (6)	i Remove through rear door.	
11	Install in the reverse order		

## Nm Cargo retainers

Number	Designation	Model 164.1/8
BA68.50-P-1002-03F	Bolt, anchoring lug to luggage compartment floor Nm	24

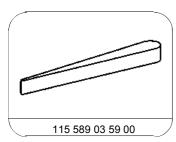

Long wedge