


Model 164, 166, 292



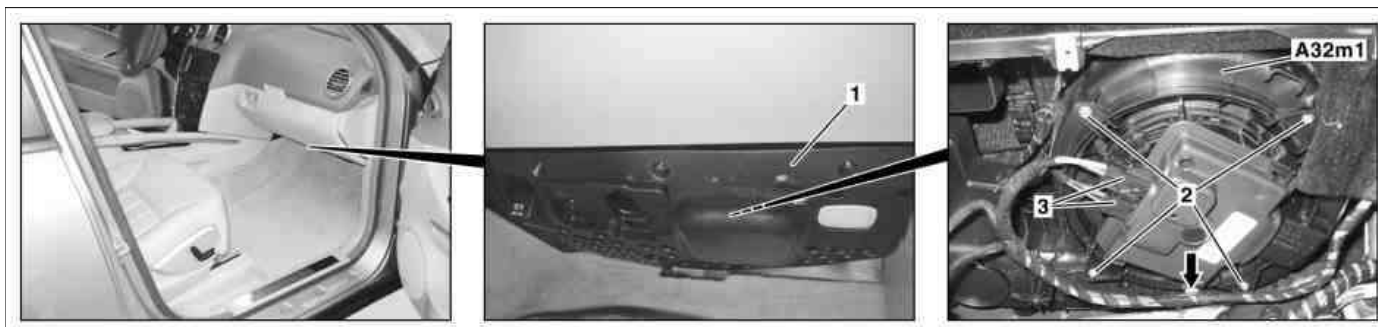

P83.30-4163-07

## Shown on model 164.1

1 Cover below dashboard  
2 Bolts

3 Electrical connectors  
A32m1 Blower motor

 	Remove/install		
1	Move right front seat all the way to the rear		
2	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Remove cover under dashboard (1)	Model 164 Model 166, 292	AR68.10-P-1520GZ AR68.10-P-1520GQ
4	Disconnect electrical connectors (3) from blower motor (A32m1)		
5	Unclip wiring harness (arrow)		
6	Remove bolts (2)		
7	Remove blower motor (A32m1)		
8	Install in the reverse order		