
## Model 164, 166, 292

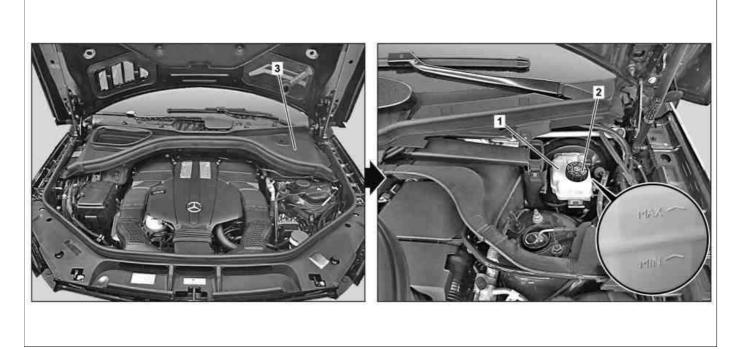

P42.10-3092-09


## Shown in model 292

1 Expansion reservoir

## Shown in model 164

1 Expansion reservoir

3 Cover over left suspension strut tower

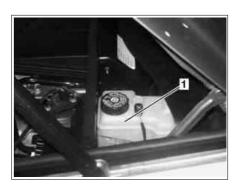

P42.10-2448-01

	<b>Risk of poisoning</b> from swallowing brake fluid. <b>Risk of injury</b> from skin and eye contact with brake fluid	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
	Brake fluid notes		AH42.50-P-0001-01A
	Notes on repairs to brake system		AH42.00-P-0003-01A
4	Check		
1	Remove cover over left suspension strut tower (3)	Model 166, 292	
2	Check fluid level in expansion reservoir (1)		
i≉ BB	General brake fluid		BB00.40-P-0330-01A
i≆"BB	Brake fluids (DOT 4 plus)		BB00.40-P-0331-00A
		i The fluid level must be between the "Min." and "Max." markings on the expansion	
		reservoir (1).	
		If the fluid level is too low:	
		$\downarrow$	

		Rectify problem subject to separate repair order.	
		If the fluid level is too high:	
		↓ ↓	
		Extract brake fluid until the fluid level is at the "Max." mark.	
3	Install cover over left suspension strut tower (3)	Model 166, 292	

jf