

<b>Item</b>	<b>Designation</b>	<b>Coor</b>
<u>B1</u>	Oil temperature sensor	29L
<u>B2/6</u>	Left hot film MAF sensor	41L
<u>B2/6b1</u>	Intake air temperature sensor	42L
<u>B2/7</u>	Right hot film MAF sensor	44L
<u>B2/7b1</u>	Intake air temperature sensor	44L
<u>B4/6</u>	Rail pressure sensor	12L
<u>B5/1</u>	Charge pressure sensor	10L
<u>B6/1</u>	Camshaft Hall sensor	26L
<u>B11/4</u>	Coolant temperature sensor	17L
<u>B17/8</u>	Charge air temperature sensor	19L
<u>B19</u>	TWC [KAT] temperature sensor	24L
<u>B19/9</u>	Temperature sensor upstream of diesel particulate filter	25L
<u>B19/9x1</u>	Temperature sensor connector upstream of diesel particulate filter	24K
<u>B28/5</u>	Pressure sensor downstream of air cleaner	22L
<u>B50</u>	Fuel temperature sensor	19L
<u>B60</u>	Exhaust back pressure sensor	21L
<u>B70</u>	Crankshaft Hall sensor	28L
<u>B76</u>	Fuel filter water level sensor	30L
<u>F58</u>	Engine compartment fuse and relay box	58L
<u>G2</u>	Generator	64L
<u>G3/2</u>	O2 sensor 1 upstream TWC [KAT]	46L
<u>G3/2x1</u>	O2 sensor upstream TWC [KAT] connector	46J
<u>M1</u>	Starter	62L
<u>M16/6</u>	Throttle valve actuator	14L
<u>M16/6m1</u>	Actuator motor	14K
<u>M16/6r1</u>	Throttle valve actual value potentiometer	15K
<u>M16/6r2</u>	Drive actual value potentiometer	15K
<u>M16/6r3</u>	Actual value potentiometer (sliding contact 1)	14K
<u>M16/6r4</u>	Actual value potentiometer (sliding contact 2)	13K
<u>M55</u>	Inlet port shutoff motor	35L
<u>N3/9</u>	CDI control module	4A 11A 19A 27A 36A 44A 52A 58A
<u>N14/3</u>	Glow time output stage	59A 63A
<u>R9</u>	Glow plugs	62E
<u>R39/1</u>	Vent line heater element	32L
<u>S43</u>	Oil level switch	33L
<u>W2</u>	Ground (at right headlamp unit)	56L
<u>W11</u>	Ground (engine - connection point for ground wires)	60E

<u>W11/4</u>	Ground (engine support)	50H
<u>W51/2</u>	Ground (engine-frame)	50L
<u>X18/7</u>	Interior/engine connector	55H
<u>Y10/1</u>	Power steering pump pressure regulator valve	40L
<u>Y27/9</u>	Left exhaust gas recirculation positioner	36L
<u>Y74</u>	Pressure regulator valve	8L
<u>Y76</u>	Fuel injectors	4L
<u>Y76y1</u>	Fuel injector (1st cylinder)	1L
<u>Y76y2</u>	Fuel injector (2nd cylinder)	2L
<u>Y76y3</u>	Fuel injector (3rd cylinder)	3L
<u>Y76y4</u>	Fuel injector (4th cylinder)	5L
<u>Y76y5</u>	Fuel injector cylinder 5	6L
<u>Y76y6</u>	Fuel injector cylinder 6	7L
<u>Y77/1</u>	Charge pressure positioner	38L
<u>Y94</u>	Volume control valve	9L
<u>Z1</u>	Connector sleeve 2 (solder joint in harness)	30G
<u>Z2</u>	Circuit TD connector sleeve	42G
<u>Z2z1</u>	Circuit TD connector sleeve	11G
<u>Z4</u>	Circuit 15/30 connector sleeve (solder connector in harness)	21G
<u>Z5</u>	Connector sleeve (solder joint in harness)	23G
<u>Z6</u>	Ground connector sleeve	34G 37G 56E
<u>Z7/5</u>	Circuit 87 connector sleeve	31G 35G 39G 42H 44H 61E
<u>Z7/43</u>	Sensor ground connector sleeve	18G
<u>Z9</u>	Connector sleeve 1	59E

