


MODEL 164

Electrically adjustable head restraint

1 Head restraint



P91.16-2277-02

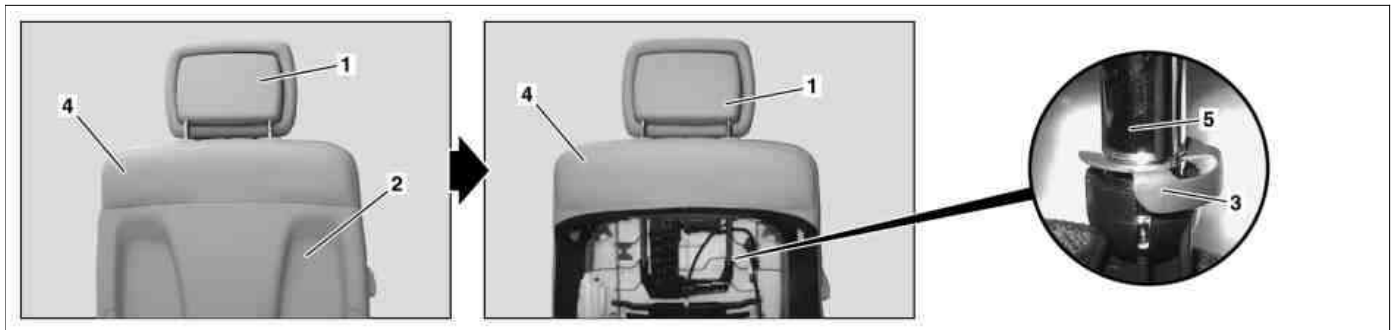

P91.16-2349-07

- 1 Head restraint
- 2 Back shell
- 3 Clip

- 4 Front seat backrest
- 5 Guide

Modification notes

26.7.06	"Disconnect/connect battery ground line" removed	Step 2	
---------	--	--------	--

Icons	Remove/install		
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove back shell (2) on front seat backrest (4)		AR91.10-P-1915GZ
2	Unclip clip (3) from guide (5)		
3	Disconnect electrical connector	<b>i</b> Vehicles with code 438 NECK-PRO.	
4	Tilt front seat backrest to the rear (4)		
5	Pull head restraint (1) out upward	⚠ Carefully remove head restraint (1) to avoid damaging the headliner.	
6	Install in the reverse order		