


1 Jump-starting point (starter-alternator, battery)

4 up to 8 Fuses

F32 Front prefuse

The prefuse box is located next to the air inlet of the air conditioning.

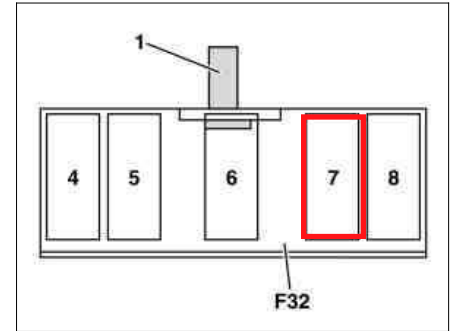

P54.15-2727-01

| Fuse | Clamping device | Cable ID (cable fused) | Fused function | Rating in amperes (A) |
|------|-----------------|------------------------|---|-----------------------|
| | - | - | - | - |
| | - | - | - | - |
| f6 | 30z | RD 4.0 | <ul style="list-style-type: none"> ● ESP control unit (N47-5) | 40 |
| f7 | 30z | 12,0 RD | <ul style="list-style-type: none"> ● AAC with integrated control additional fan motor (M4/7) | 100 |
| f8 | 30z | 10,0 RD | <ul style="list-style-type: none"> ● Engine compartment fuse and relay box (F58) | 150 |