


AD00.00-P-2000-04A	Connect STAR DIAGNOSIS and read out fault memory		
--------------------	--	--	--

**Model** 117, 124.034/036, 129, 140, 156, 163, 164, 166, 168, 169, 170, 171.4, 172, 176, 197, 199, 202, 203, 204, 207, 208, 209, 210, 211, 212, 215, 216, 218, 219, 220, 221, 230, 231, 240, 242, 245, 246, 251, 292, 414  
**Model** 461, 463

**Shown on model 210**


- 1 Diagnostic connector
- 2 Diagnostic system

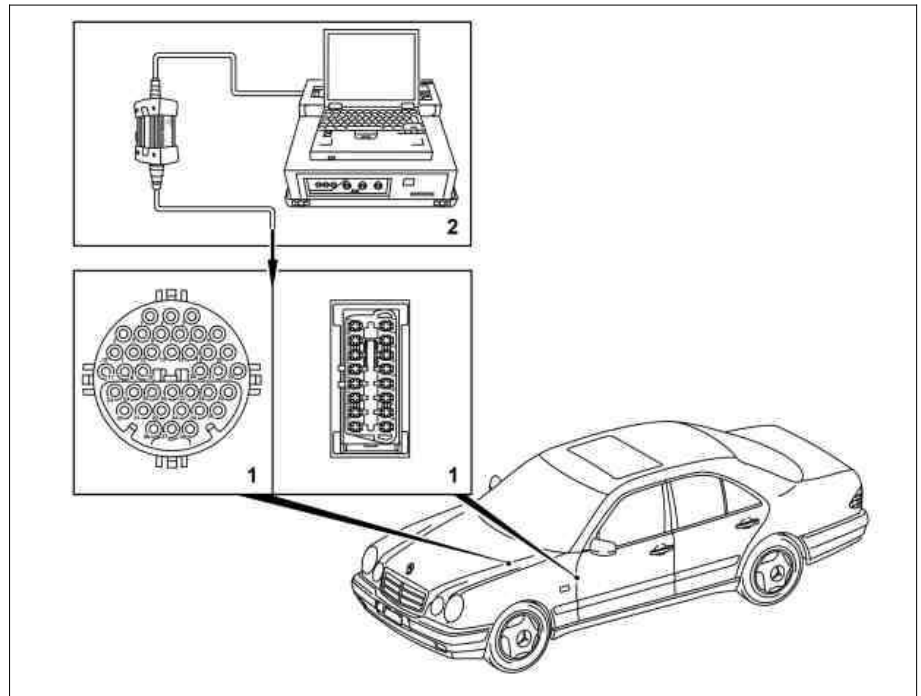

P00.00-5442-06

**Shown on model 204**

- 1 Diagnostic connector
- 2 Diagnostic system

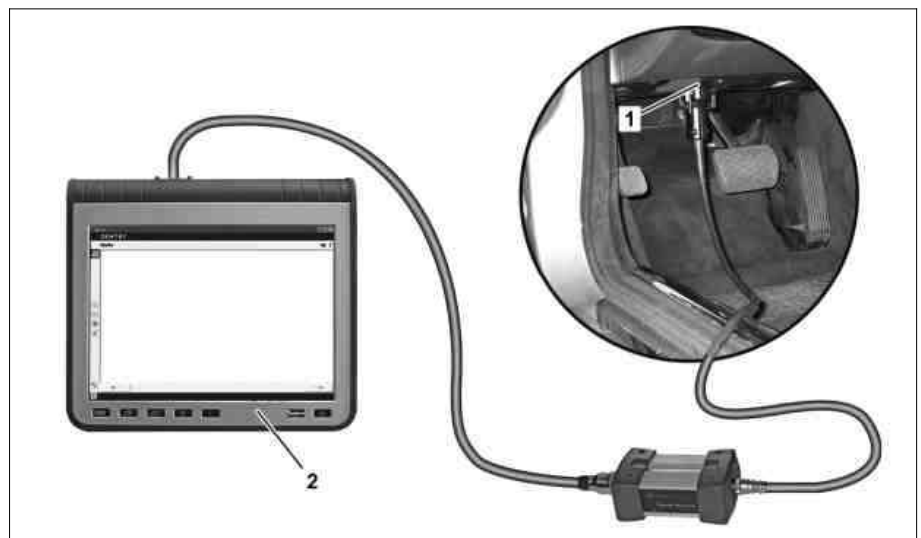

P00.00-5443-05

- 1 Connect diagnostic system (2) to diagnostic connector (1).
- 2 Start diagnosis.
- 3 Select the model series in the menu.

**i** Stored faults which may be caused by disconnecting cables or by simulation during testing operations must be deleted in the diagnostic trouble code memory following completion of the operations.

- 4 Disconnect diagnostic system (2).

Following completion of diagnostic operations.

**i** The work procedures in the diagnosis program are menu-assisted.