
MODEL 164

search EPC 82-165

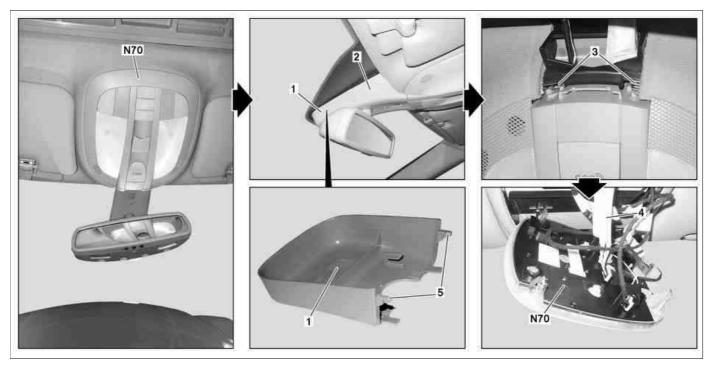


P82.20-2667-09

- 1 Front section, covering, rain/light sensor
- 2 Rear section, covering, rain/light sensor
- 3 Clamps
- 4 Ribbon cable

5 Catch lugs

N70 Overhead control panel control unit

XX	Remove/install		
③	Information on preventing damage to electronic components due to electrostatic discharge	All models	AH54.00-P-0001-01A
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Unclip front section, covering, rain/light sensor (1) toward the front	arefully unclip tabs (5).	
3	Unclip rear section, covering, rain/light sensor (2) downward	i Carefully detach rear section of rain/light sensor covering from line.	
4	First unclip overhead control panel control unit (N70) at the front clips (3), then at the rear clips (3) and carefully remove downward	Treat ribbon cable (4) carefully to prevent damage. Mounting wedge	*110589035900
5	Disconnect electrical connectors from overhead control panel control unit (N70)		
6	Install in the reverse order		
7	Carry out function check		

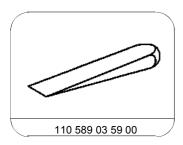

Mounting wedge