


## MODEL 164

Illustrated on model 164.1

- 1 Trim  
2 Electrical connector  
3 Nuts

- E3 Left taillamp  
E4 Right taillamp

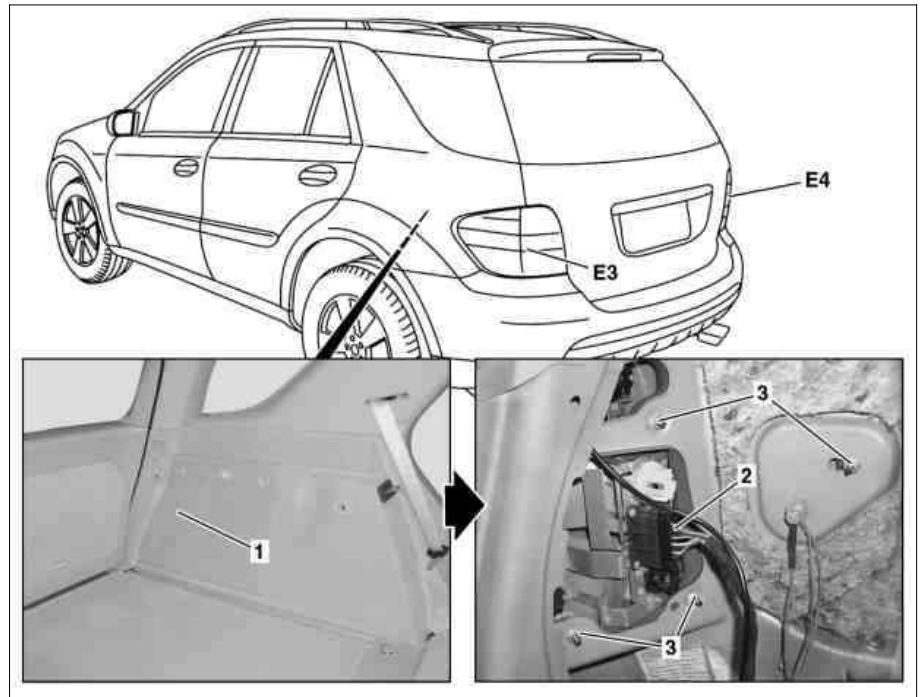

P82.10-3853-06

| ☒ ☒ | Remove/install   |  |  |
|-----|--|--|--|
| 1   | Switch off ignition and remove transmitter key from EIS control unit | <b>i</b> On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m). |  |
| 2   | Remove panel (1) in load compartment                                 | <b>i</b> For model 164.8 remove left stowage compartment.  |  |
| 3   | Disconnect electrical connector (2)                                  |  |  |
| 4   | Unscrew nuts (3).  | <b>i</b> For model 164.1 undo four nuts (3).<br><b>i</b> For model 164.8 undo three nuts (3).  |  |
| 5   | Remove left taillamp (E3) or right taillamp (E4) to the rear         | <b>i</b> <b>Installation:</b> Ensure that the rubber seal is secured properly.   |  |
| 6   | Install in the reverse order   |  |  |