
Model 166, 292

Shown on model 166 with CODE 494 (USA version)

- 1a Top B-pillar paneling
- 1b Bottom B-pillar paneling
- 2 Belt end fitting outer paneling
- 4 Locking plate
- 5 Screw
- 6 Seat belt



P68.30-3573-12

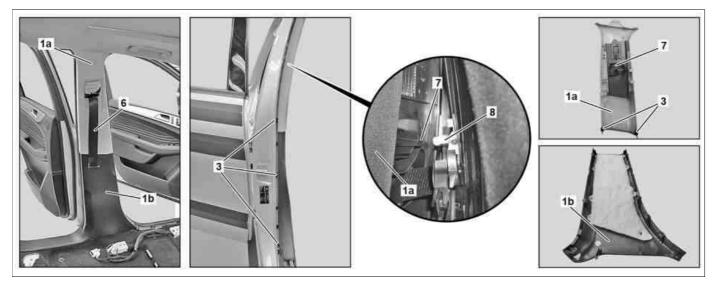

P68.30-3575-08

1a Top B-pillar paneling1b Bottom B-pillar paneling

Retaining clips
Guide

8 Pin

XX Remove/install Remove front and rear door sill AR68.30-P-4100GQ 1 2 Move front seat forward and move backrest to vertical position 3 AR91.10-P-1200GQ Remove belt end fitting outer paneling (2) 4 Model 166, 292 Remove screw (5) with code 494 (US version) Nm Bolt, locking plate on belt end fitting/ *BA91.40-P-1002-01R tensioner

5	Remove tab washer (4)	Model 166, 292	
		with code 494 (US version)	
6	Pull seat belt (6) toward front (arrow) out of	Model 166, 292	
	guide on front seat	with code 494 (US version)	
		i Installation: Do not twist seat belt (6).	
7	Remove bolt from belt end fitting	Model 166, 292	
		with code 494 (US version)	
		Mm Bolt, belt end fitting/tensioner on front sea	*BA91.40-P-1001-01R
8	Loosen edge guard at front and rear in area of		
	upper B-pillar paneling (1a) and lower B-pillar paneling (1)		
0			
9	Unclip upper B-pillar paneling (1a) from B- pillar	i Installation: Ensure that retaining clips (3)	
	pinor	are seated correctly.	*11050005000
		S Mounting wedge	*110589035900
10	Pull upper B-pillar paneling (1a) downward	i Installation: It is necessary to insert guide	
	out of guide on roof and remove	(7) into bolt (8).	
11	Unclip lower B-pillar paneling (1b) on B-pillar	i Installation: Ensure that retaining clips (3)	
	and remove	are seated correctly.	
		S Mounting wedge	*110589035900
12	Install in the reverse order		

Nm Seat belts/emergency tensioning retractors

Number	Designation		Model 166	Model 292
BA91.40-P-1001-01R	Bolt, belt end fitting/tensioner on front seat	Nm	35	35

Nm Seat belts/emergency tensioning retractors

Number	Designation		Model 166	Model 292
BA91.40-P-1002-01R	Bolt, locking plate on belt end fitting/tensioner	Nm	4	4

