


Model 166, 292

Shown on right front seat in MODEL 166

- 1 Front seat
- 2 Cover
- 3 Bolts
- 7 Bolts
- 8 Cover
- 9 Retaining clip
- 10 Electric wiring harnesses

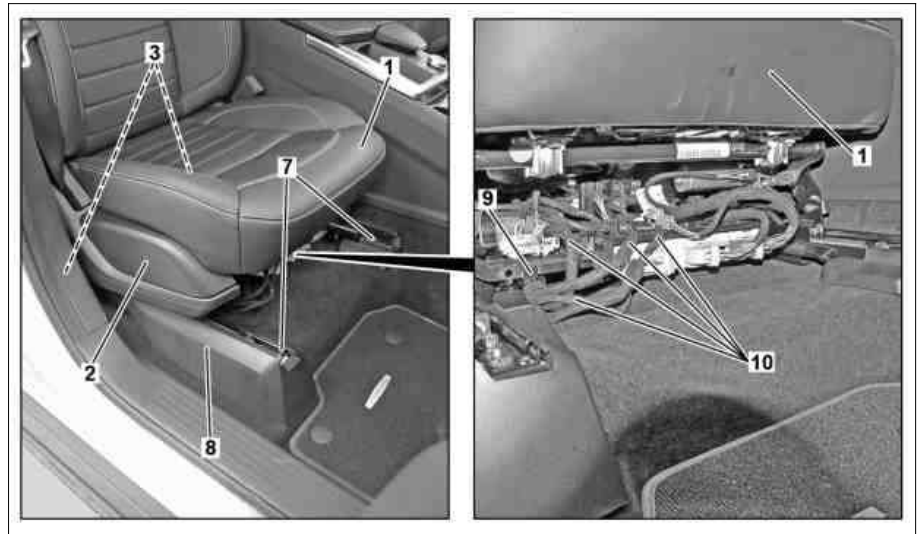

P91.10-3612-05

Shown on left front seat in MODEL 166 with CODE 494 (USA version)


- 2 Cover
- 4 Locking plate
- 5 Screw
- 6 Seat belt



P68.30-3573-12

Shown on right front seat in MODEL 166 except CODE 494 (USA version)

- 1 Front seat
- 1c Belt end fitting

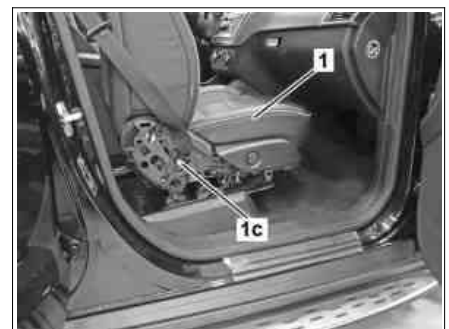


 


P91.10-3689-01

Warning

Risk of injury during testing and repair operations related to pyrotechnical components

Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.

AS91.00-Z-0008-01A

 Warning	Risk of injury. Moving parts can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating area of mechanical components when moving components.	AS00.00-Z-0009-01A
	Notes on performing repair, body work and welding on vehicles with airbags and RTE units		AH91.00-P-0002-01M
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
	Remove/install		
1	Move front seat forward (1) and retract head restraint		
2	Remove cover (2)		AR91.10-P-1200GQ
3	Remove screw (5)	Model 166 with code 494 (US version) Model 292 with code 494 (US version)  Bolt, locking plate on belt end fitting/tensioner	*BA91.40-P-1002-01R
4	Remove tab washer (4)	Model 166 with code 494 (US version) Model 292 with code 494 (US version)	
5.1	Pull seat belt (6) toward front (arrow) out of guide at front seat (1)	Model 166 with code 494 (US version) Model 292 with code 494 (US version)  Installation: Do not twist seat belt (6).	
5.2	Remove screw/bolt from belt end fitting (1c) and remove belt end fitting (1c)	Model 166 except code 494 (US version) Model 292 except code 494 (US version)  Installation: Do not twist seat belt (6).  Bolt, belt end fitting/tensioner on front seat	*BA91.40-P-1001-01R
6	Remove rear screws/bolts (3) from front seat (1)	 Screw/bolt, seating mounting bracket to vehicle floor	*BA91.10-P-1001-01L
7	Move front seat (1) far enough to rear until the front screws/bolts (7) are accessible		
8	Remove front screws/bolts (7) from front seat (1)	 Screw/bolt, seating mounting bracket to vehicle floor	*BA91.10-P-1001-01L
9	Remove cover (8) from guide rail		AR91.10-P-1200GQ
10	Disconnect battery ground line		AR54.10-P-0003GZ
11	Disconnect electrical connectors from electrical wiring harnesses (10) at front seat (1)		
12	Unclip electrical wiring harnesses (10) from front seat (1)	 Installation: Ensure that retaining clip (9) is correctly seated and the electrical wiring harnesses (10) are correctly routed.	
13	Disconnect pneumatic line from bottom of front seat (1)	Model 166, 292 with code 399 (Multicontour front seats with massage function)  Carefully detach pneumatically line. Danger of breakage.	
14	Cover center console, door sill and steering wheel	 Cover	*000588089800
15	Remove front seat (1) from the vehicle through the door cutout for the front door	 Helper required.  Installation: Check that the lock pin for the guide rail is correctly seated in the vehicle floor.	
16	Put down front seat (1) and secure it against tipping over		
17	Install in the reverse order		

 Front seats


Number	Designation		Model 166	Model 292
BA91.10-P-1001-01L	Screw/bolt, seating mounting bracket to vehicle floor	Nm	50	50

Nm Seat belts/emergency tensioning retractors

Number	Designation		Model 166	Model 292
BA91.40-P-1001-01R	Bolt, belt end fitting/tensioner on front seat	Nm	35	35

Nm Seat belts/emergency tensioning retractors

Number	Designation		Model 166	Model 292
BA91.40-P-1002-01R	Bolt, locking plate on belt end fitting/tensioner	Nm	4	4

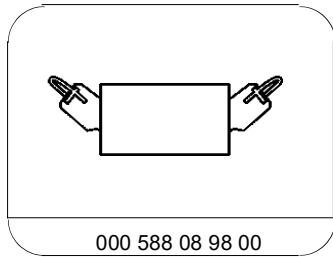

Cover