


Model 166, 292

Shown on model 166


- 1 Cover
- 2 Screws

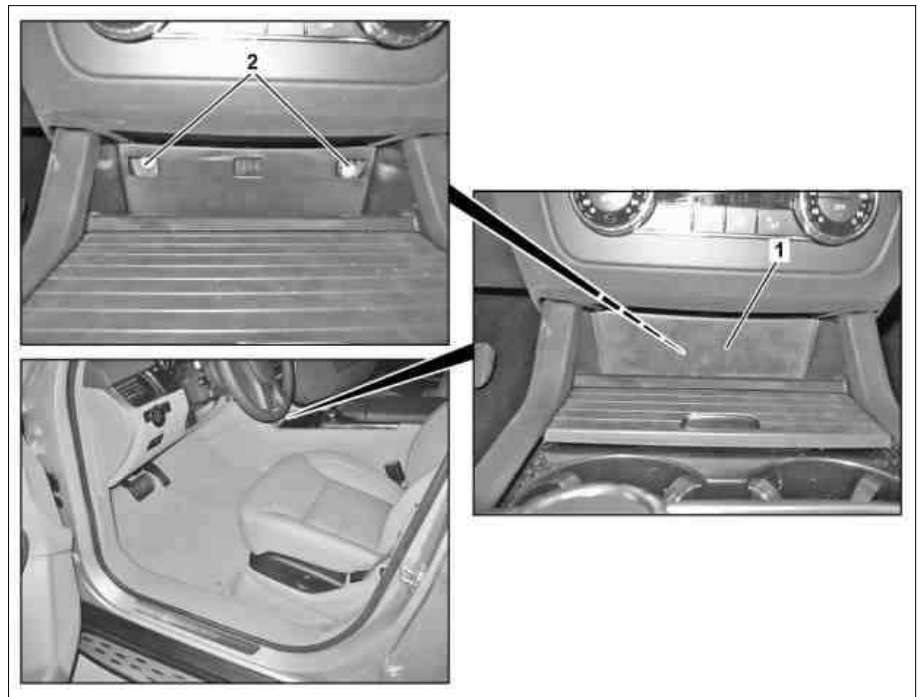

P68.20-4434-06

Shown on model 166


- 3 Cover
- 4 Screws
- 5 Screws
- 6 Trim
- 7 Electrical connectors
- 8 Electrical connectors

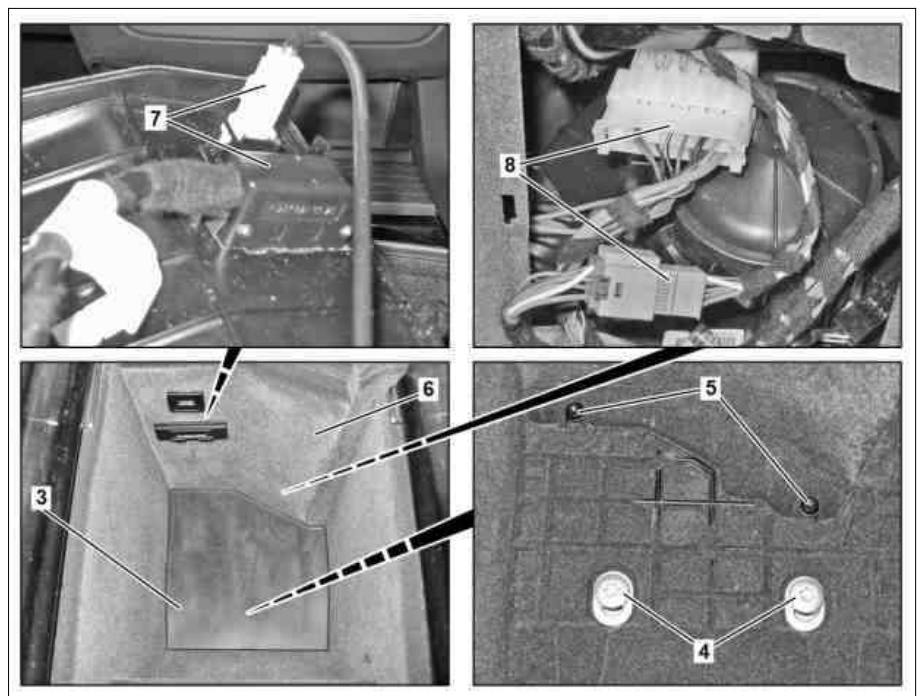

P68.20-4436-06

Shown on model 166

- 9 Cover
- 10 Screws
- 11 Electrical connectors

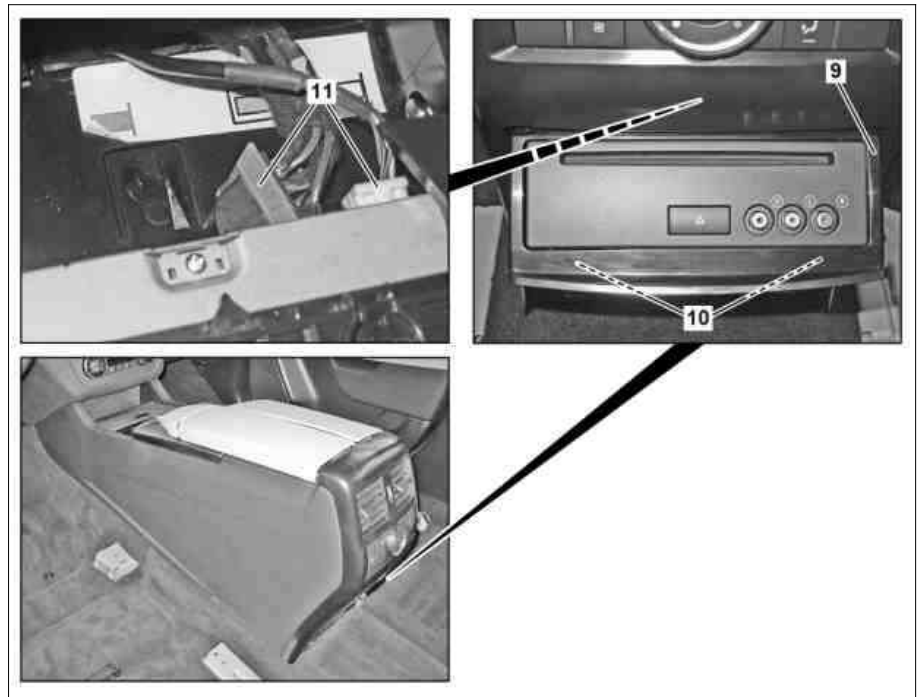

P68.20-4437-06

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
☒ ☒	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Remove cover (1)		
3	Remove screws (2) below		
4	Remove cover (3)		
5	Remove screws (4, 5) below		
6	Slightly pull trim (6) upward and remove toward rear		
7	Unclip electrical connectors (7)		
8	Guide lower electrical connector toward front through opening out of center console		
9	Disconnect electrical connectors (8)		
10	Pull DVD player downwards	Model 166, 292 with code 864 (Rear compartment entertainment package) i Installation: Ensure that the catch tabs engage audibly.	
11	Unclip cover (9)	Model 166, 292 with code 864 (Rear compartment entertainment package) i Installation: Ensure that the upper retaining clips are seated correctly.	
12	Remove screws (10) below	Model 166, 292 with code 864 (Rear compartment entertainment package)	
13	Slightly pull out DVD player until electrical connectors (11) are accessible	Model 166, 292 with code 864 (Rear compartment entertainment package)	
14	Disconnect electrical connectors (11)	Model 166, 292 with code 864 (Rear compartment entertainment package)	
15	Lift center console at rear and remove to front passenger side	i Aid of helper required.	
16	Install in the reverse order		