



MODEL 166
40 % rear seat cushion

Shows model 166.0

- 1 Electrical connector
- 2 Bolts
- 6 Electrical line

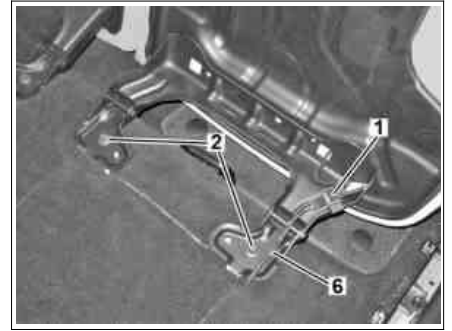

P91.12-3560-01

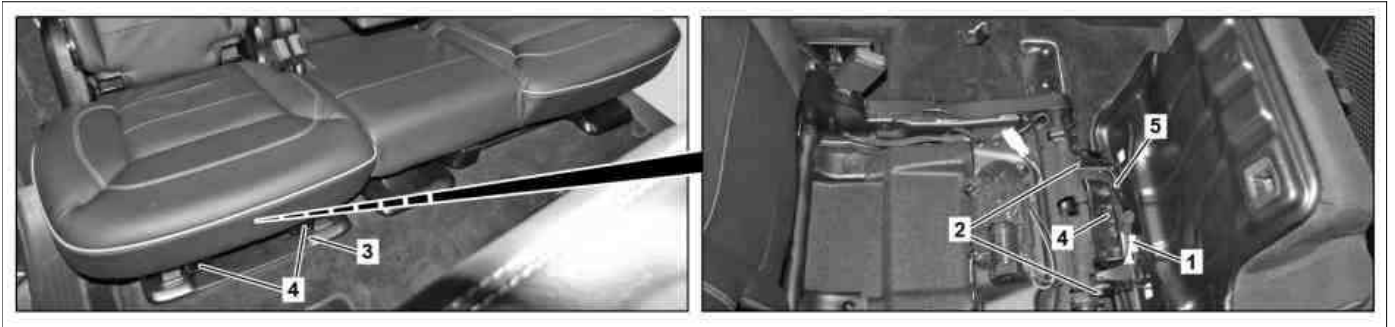

P91.12-3651-07

Show on model 166.8

- 1 Electrical connector
- 2 Bolts
- 3 Cover
- 4 Cover
- 5 Electrical line

	Risk of injury. Moving parts can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating area of the mechanism when the components are moving.	AS00.00-Z-0009-01A
	Remove/install		
1	Remove cover (3) from vehicle floor	MODEL 166.840 % rear seat cushion	
2	Fold up seat cushion		
3	Unclip cover (4) at seat frame	MODEL 166.840 % rear seat cushion	
4.1	Disconnect electrical connector (1)	MODEL 166.0 with CODE 872 (Electrically heated left and right rear seats) 40 % rear seat cushion Ensure that the electrical line (6) is routed correctly.	
4.2	Disconnect electrical connector (1) and unclip electrical line (5) from rear seat cushion	MODEL 166.8 with CODE 872 (Electrically heated left and right rear seats) 40 % rear seat cushion Ensure that the electrical line (5) is routed correctly.	
5	Remove bolts (2)	MODEL 166.840 % rear seat cushion Installation: Replace screws/bolts (2). 	*BA91.12-P-1004-03F
		MODEL 166.8 40 % rear seat cushion 	*BA91.12-P-1001-03F
		MODEL 166.0 40 % rear seat cushion	
6	Remove rear seat cushion		
7	Install in the reverse order		

Nm Rear seats

Number	Designation	MODEL 166.8
BA91.12-P-1004-03F	Bolt, rear seat cushion to rear seat console	Nm 25

Nm Rear seats

Number	Designation	MODEL 166.0
BA91.12-P-1001-03F	Bolt, rear seat console to vehicle floor	Nm 50