



Model 166, 292

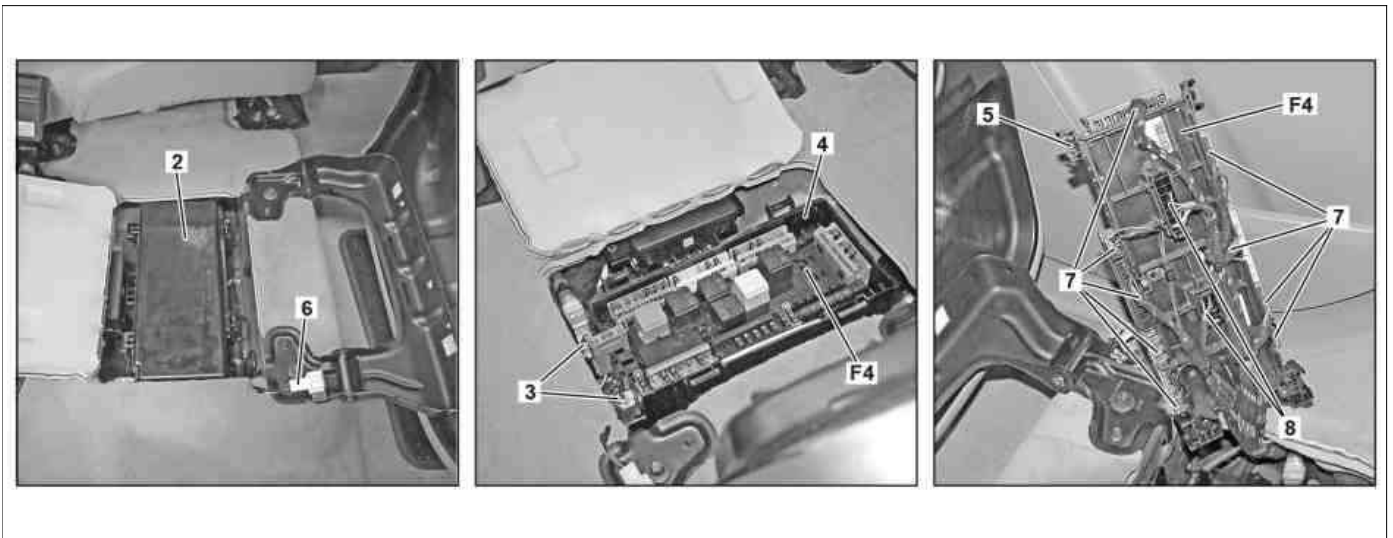

P54.15-3445-08

Shown on model 166.024

- 2 Cover
- 3 Electrical feed lines
- 4 Housing
- 5 Retaining clip
- 6 Electrical feed line
- 7 Electrical connectors
- 8 Electrical feed lines
- F4 Rear fuse box

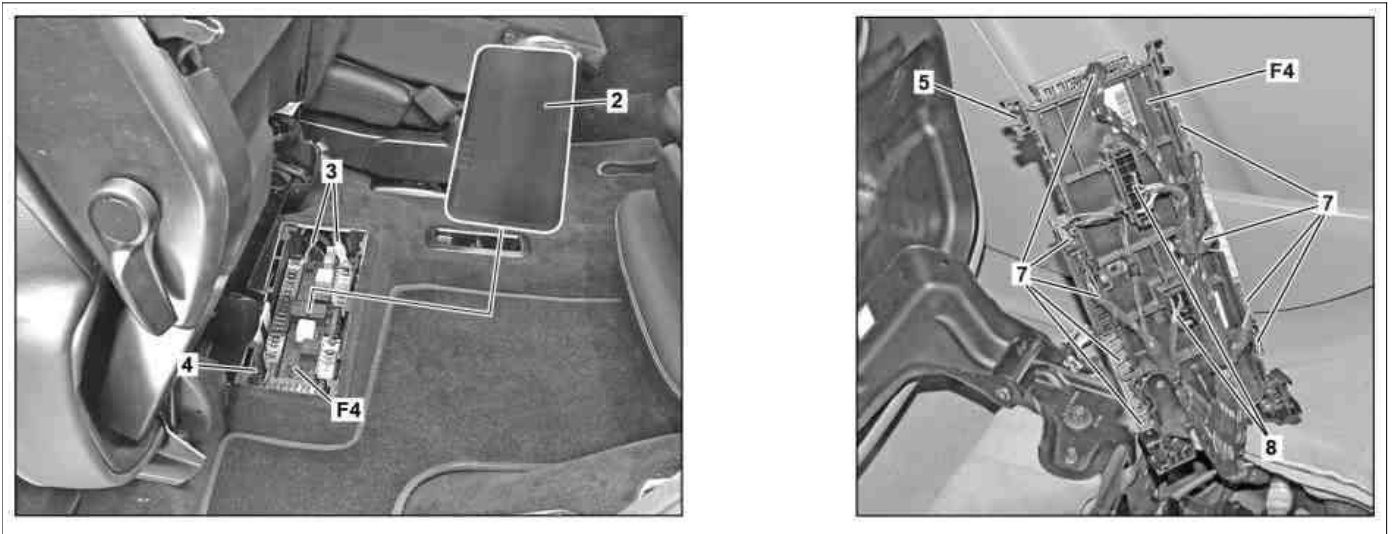

P54.15-3536-08

Shown on model 166.873

- 2 Cover
- 3 Electrical feed lines
- 4 Housing
- 5 Retaining clip
- 7 Electrical connectors
- 8 Electrical feed lines
- F4 Rear fuse box

ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
⊗ ⊗	<b>Remove/install</b>		
1 ⓘ	Disconnect battery ground line Notes on battery		AH54.10-P-0003GZ AH54.10-P-0001-01A

2.1	Fold right seat cushion in rear forward and fold back floor covering	Model 166.0	
2.2	Fold left rear seat forward	Model 166.8	
2.3	Fold right seat cushion in rear forwards	Model 292	
3	Remove cover (2)		
4	Unclip electrical feed line (6) from seat cushion in rear		
5	Detach electrical feed lines (3) from rear fuse box (F4)		
6	Unclip rear fuse box (F4) from housing (4) and remove	<b>i</b> <b>Installation:</b> Clip (5) must latch audibly into housing (4).	
7	Detach cable tie from electrical feed lines (8)	<b>i</b> <b>Installation:</b> Replace cable tie.	
8	Release and disconnect electrical feed lines (8) from rear fuse box (F4)		
9	Detach electrical connections (7) from rear fuse box (F4) and rear fuse box (F4)	<b>i</b> Number of electrical connections (7) and fuse assignment varies depending on vehicle model and equipment.	
10	Install in the reverse order		