


Model 166.0

- 11 Side paneling in trunk on left
- 1r Side paneling in trunk on right
- 2 Load compartment floor
- 3 Anchoring hook
- 4 Stowage compartment
- 5 Screw
- 6 Rear center section paneling
- 7 Support
- 8 Edge guard
- 9 Tie-down eye
- 10 Electrical connector

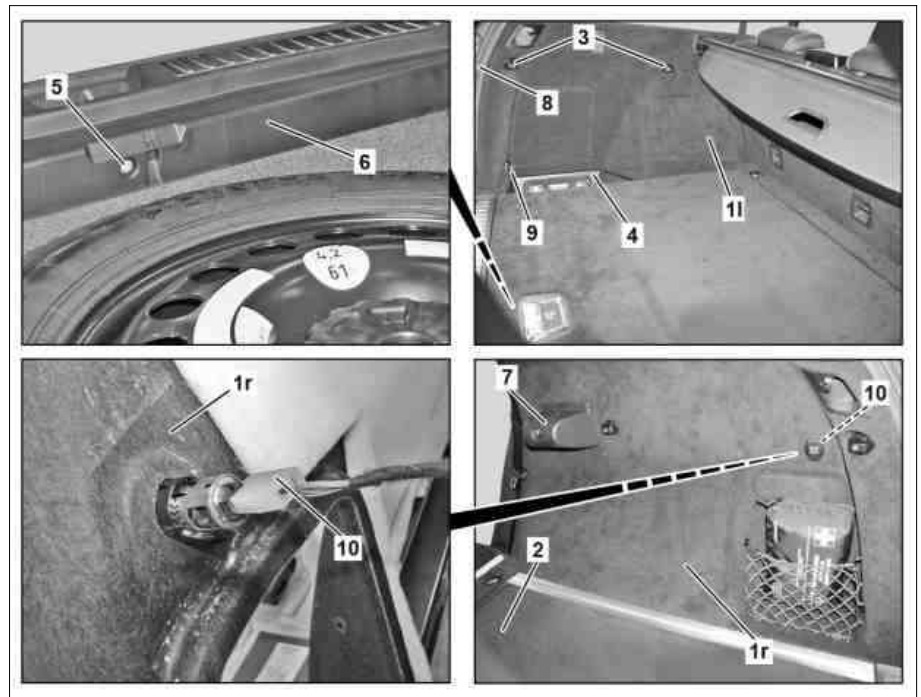

P68.30-3576-06


- 11 Rails
- 12 Bolts




 
P68.30-3800-11

 
 
 
Shown on left side of vehicle

- 13 Rear door sill molding
- 14 Edge guard

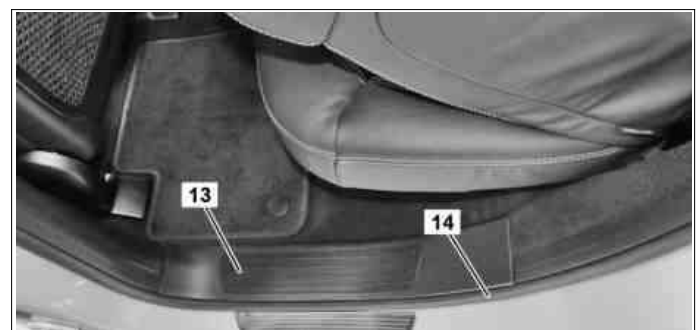


P68.30-3801-10

 	Remove/install		
1	Release backrest in rear and fold over		
2	Remove load compartment cover		
3	Remove support (7)	If installed.	

4	Remove load compartment floor (2)	Model 166.063	AR68.80-P-5800GQA
5	Unscrew bolts (12) and remove rails (11)	Model 166.0 (except 166.063)	
6	Unscrew bolt (5) and remove rear center section paneling (6)		
7	Remove storage compartment (4)	If installed.	
8	Remove lashing eyes (3)		
9	Remove lashing eye (9)	 Screw/bolt, tie-down eye to body/trunk floor	*BA68.50-P-1002-03F
10	Detach edge guard (8) on D-pillar in working area		
11	Remove rear door sill (13) from C-pillar		AR68.30-P-4100GQ
12	Detach edge guard (14) on C-pillar in working area		
13	Unclip side paneling in left and right trunk (1l, 1r) from D-pillar paneling	 Installation: Ensure that retaining clip on D-pillar is aligned correctly.  Mounting wedge	*110589035900
14	Pull side paneling in right trunk (1r) out until electrical connector (10) is accessible	When removing side paneling in right trunk in right trunk (1r).	
15	Disconnect electrical connector (10)	When removing side paneling in right trunk in right trunk (1r).	
16	Remove side paneling in left and right trunk (1l, 1r)		
17	Install in the reverse order		

 Cargo retainers

Number	Designation	Model 166
BA68.50-P-1002-03F	Screw/bolt, tie-down eye to body/trunk floor	Nm 24

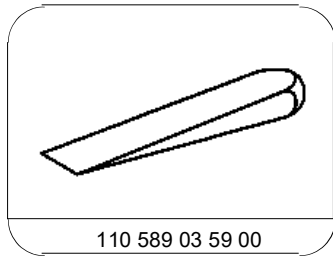

110 589 03 59 00

Mounting wedge