




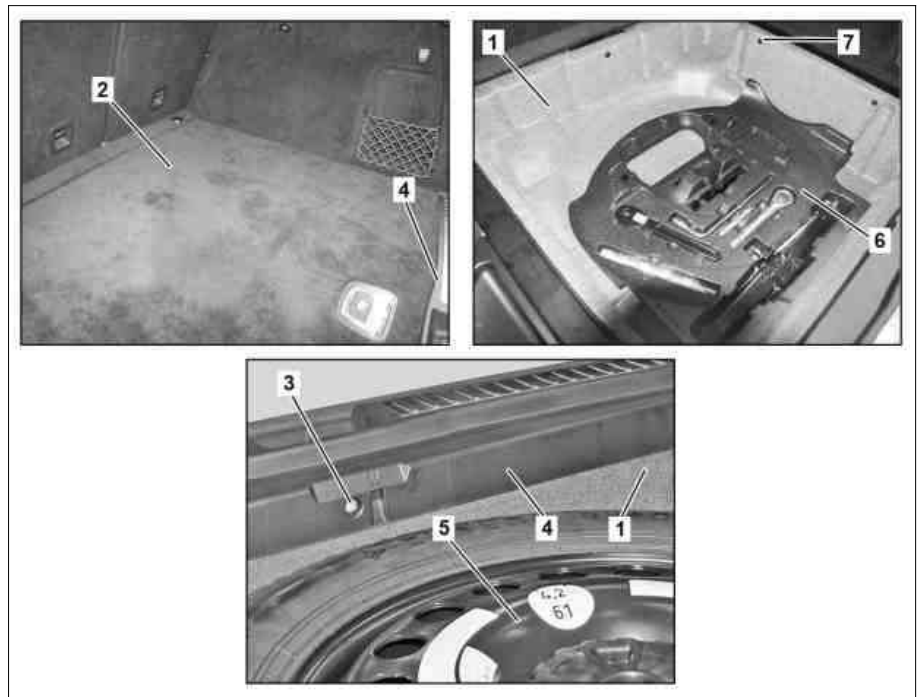

MODEL 166

Shown on model 166.024 with CODE 690 (emergency spare tire), without code 489 (AIRMATIC (air suspension with level adjustment and adaptive damping system, ADS))

- 1 Spare tire well paneling
- 2 Load compartment floor
- 3 Screw
- 4 Cover strip
- 5 Spare wheel
- 6 Vehicle tool kit shaped part
- 7 Clip



P68.30-3577-06

 	Remove/install		
1.1	Remove load compartment floor (2)	MODEL 166.0	
1.2	Lift load compartment floor (2)	MODEL 166.8	
2	Remove AIRmatic central memory	MODEL 166.0 with CODE 489(Airmatic (air suspension with level adjustment and adaptive damping system ADS))	AR32.22-P-2017GQ
3	Remove spare tire (5)	MODEL 166 with CODE 690(Collapsible spare wheel)	
4	Unscrew bolt (3) and remove cover strip (4)	 Model 166.8 unscrew with two bolts (3).	
5	Remove vehicle tool kit shaped part (6)		
6	Pry out clips (7) from spare wheel well paneling (1)		
7	Remove spare tire well trim (1)	 Installation: Ensure that spare wheel well (1) is routed correctly.	
8	Install in the reverse order		