


ENGINE 642 in MODEL 164

- 1 Engine cover
- 2 Guides
- 3 Pin

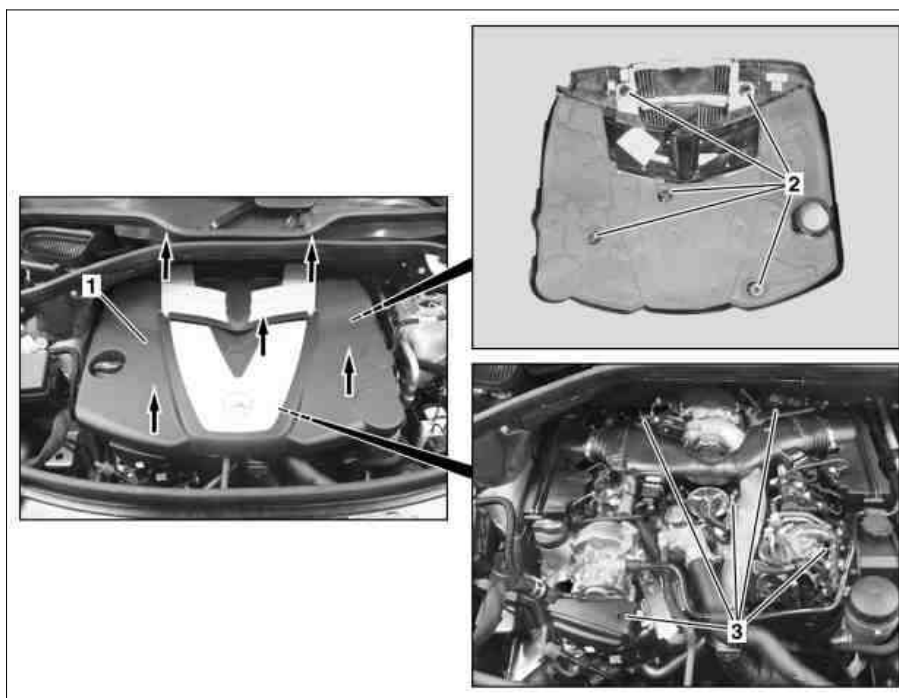

P01.10-2595-06

☒ ☒	Remove/install		
1	<p>Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.</p> <p>Open engine hood and raise to vertical position</p>	<p>Keep body parts and limbs well clear of moving parts.</p> <p>i After closing the engine hood check the locking function, for this step pull engine hood jerkily to the top.</p>	<p>AS00.00-Z-0011-01A</p> <p>AR88.40-P-1000GZ</p>
2.1	Removes spring dome strut	<p>Only for model 164.8</p> <p>i Remove spring dome strut at spring dome mounts.</p>	AR62.30-P-2500GY
3	Detach engine cover (1) upwards (arrows) from bolt (3) and remove	<p>i Installation: Cover guides (2) with lubricant.</p> <p>Antifriction agent</p>	*BR00.45-Z-1010-06A
4	Install in the reverse order		

Repair materials

Number	Designation	Order number
BR00.45-Z-1010-06A	Lubricant, rubber assembly 1 l	A 000 989 03 67