


MODEL 164

Show on model 164.1 with headlamp cleaning system, code 600

1 Electrical connector

B10/5 Outside air temperature sensor

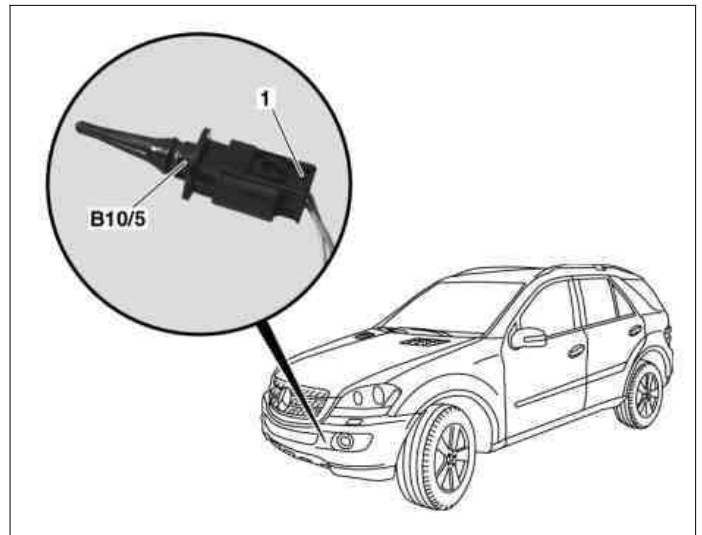

P83.70-4996-11

☒ ☒	Remove/install		
1	Open engine hood		AR88.10-P-1000GZ
2	Pull outside air temperature sensor (B10/5) out of bracket in bumper.	i Installation: Insert outside air temperature sensor (B10/5) into bracket in bumper until it arrests.	
3	Disconnect electrical connector (1) and remove outside air temperature sensor (B10/5).		
4	Install in the reverse order		
5	Perform a function test		